

ID	TASK
1300574	1300574 ND optický valec PC cartridge
1300575	1300575 ND Fuser Kit S/FK54
1300708	1300708 Oprava notebooku Compaq 6730b
1300558	1300558 Oprava záložného zdroja APC
1300492	1300492 Oprava monitora
1300491	1300491 Oprava UPC APC 750
1300483	1300483 Oprava tlačiarne WN 4915xe
1300493	1300493 Oprava monitora
1300653	1300653 servis záložného zdroja APC
1300497	1300497 Oprava tlačiarne FX 890
1300498	1300498 Oprava tlačiarne FX 890
1300588	1300588 Oprava tlačiarne FX 890
1300591	1300591 Oprava UPS Smart UPS 1000
1300649	1300649 Oprava monitora HP L1908w
1300669	1300669 Oprava monitora HP L1706
1300670	1300670 Oprava monitora HP L1706
1300572	1300572 ND batéria HR1234W
1300627	1300627 ND disk WD5000A
1300628	1300628 ND batéria HR1234W
1300648	1300648 ND batéria HR1234W
1300650	1300650 ND batéria HR1234W
1300687	1300687 ND batéria HR1234W
1300706	1300706 ND Power supply 437798 (240 W
1300715	1300715 Photoreceptor drum pre Printronix L5535
1300524	1300524 oprava Wincor Nixdorf 4915xe
1300548	1300548 oprava PC HP dc 7800
1300549	1300549 oprava tl. Wincor Nixdorf 4915xe
1300550	1300550 oprava tl. Wincor Nixdorf 4915xe
1300551	1300551 oprava tl. HP LJ 3030
1300555	1300555 bateria pre Motorola MC 9094
1300688	1300688 bateria pre UPS APC ES700
1300753	1300753 baterie pre Motorola MC9094
1300620	1300620 bateria pre UPS APC ES700
1300459	1300459 Oprava Epson FX 890
1300460	1300460 Oprava Epson FX 890
1300464	1300464 Oprava Tally T 5023+
1300465	1300465 Oprava Tally T 5023+
1300490	1300490 Oprava Epson FX 890
1300495	1300495 Oprava HP LaserJet P2055dn
1300496	1300496 Oprava HP LaserJet 1320n
1300511	1300511 Oprava APC UPS ES700
1300562	1300562 Oprava APC UPS ES700
1300571	1300571 Oprava PC HP 350
1300701	1300701 Oprava PC HP 350
1300750	1300750 ND do HP DL360 G5
1300485	1300485 Oprava tlačiarne WN 4915xe
1300717	1300717 Oprava LCD monitora
1300721	1300721 Oprava LCD monitora
1300722	1300722 Oprava LCD monitora
1300723	1300723 Oprava LCD monitora
1300729	1300729 Oprava PC HP 7600SFF
1300730	1300730 Oprava PC HP 7600SFF
1300468	1300468 Oprava tlač.Epson FX 890
1300474	1300474 Oprava tlač.WN 4915xe
1300475	1300475 Oprava tlač.WN 4915xe
1300481	1300481 Oprava snímača ČK MS9520
1300482	1300482 Oprava tlač.Epson FX 890

1300561	1300561 Oprava tlač.WN 4915xe
1300626	1300626 ND batéria do UPS APC ES 700
1300661	1300661 ND batéria do UPS APC ES 700
1300731	1300731 ND batéria do UPS APC ES 700
1300732	1300732 ND batéria do UPS APC ES 700
1300733	1300733 ND batéria do UPS APC ES 700
1300734	1300734 ND batéria do UPS APC ES 700
1300466	1300466 Oprava sieťového prvku
1300467	1300467 Oprava sieťového prvku
1300569	1300569 Oprava tlač. HP LaserJet 2600N
1300570	1300570 Oprava tlač. HP LaserJet 1150
1300573	1300573 Oprava UPS APC Smart 2200
1300469	1300469 Oprava tlač.Epson FX 890
1300470	1300470 Oprava tlač.Epson FX 890
1300615	1300615 Oprava monitora
1300736	1300736 Oprava tlač.WN 4915xe
1300563	1300563 Oprava tlač.WN 4915xe
1300477	1300477 oprava snímača Metrologic MS1690
1300513	1300513 oprava tlačiarne HP 1320
1300515	1300515 oprava tlačiarne HP 2055
1300518	1300518 oprava tlačiarne HP LJ1200
1300672	1300672 Oprava monitora
1300559	1300559 Oprava tlač.WN 4915xe
1300624	1300624 Oprava tlač.PSI 4050
1300508	1300508 Oprava tlač.WN 4915xe
1300509	1300509 Oprava tlač.WN 4915xe
1300521	1300521 oprava tlačiarne HP 2430tn
1300525	1300525 Wincor Nixdorf 4915xe
1300526	1300526 Wincor Nixdorf 4915xe
1300819	1300819 oprava tlačiarne HP LJ1320n
1300820	1300820 oprava tlačiarne HP LJ2430n
1300501	1300501 Oprava tlačiarne WN HPR4915xe
1300567	1300567 Oprava tlačiarne Epson FX 890
1300580	1300580 Oprava tlačiarne HP LJ 2430TN
1300592	1300592 Oprava APC Smart UPS 750
1300593	1300593 Oprava HP LJ 3055
1300634	1300634 Oprava APC Back UPS ES 700VA
1300652	1300652 Oprava HP LJ P2015n
1300800	1300800 Oprava tlačiarne WN HPR4915xe
1300581	1300581 Oprava tlačiarne Epson FX 890
1300583	1300583 Oprava tlačiarne HP LJ 1320
1300587	1300587 Oprava HP LJ P2015dn
1300590	1300590 Oprava APC Back UPS ES 700VA
1300696	1300696 Oprava tlač.WN 4915xe
1300484	1300484 Oprava tlač.WN 4915xe
1300659	1300659 Oprava tlač. HPLJ 1320n
1300790	1300790 Oprava notebooku Compaq 6710b
1300735	1300735 Oprava tlač.WN 4915xe
1300632	1300632 Oprava tlač.WN 4915xe
1300635	1300635 Oprava tlač.WN 4915xe
1300660	1300660 Oprava tlač.WN 4915xe
1300471	1300471 Oprava tlač.WN 4915xe
1300473	1300473 Oprava snímača ČK MS 9520
1300560	1300560 Oprava tlač. WN 4915xe
1300783	1300783 Oprava zál.zdroja GE Lan 10kVA
1300522	1300522 oprava tl. Wincor Nixdorf 4915xe
1300512	1300512 oprava tlačiarne HP 1320
1300479	1300479 oprava tl. Epson FX890
1300517	1300517 oprava notebook HP 6730b

1300520	1300520 oprava tl. WincorNixdorf 4915xe
1300849	1300849 oprava tlačiarne Toshiba TEC B S
1300514	1300514 oprava tlačiarne HP 2300n
1300476	1300476 oprava tl. Epson FX890
1300704	1300704 oprava tl. Wincor Nixdorf 4915xe
1300487	1300487 oprava tl. Epson FX890
1300752	1300752 ND tlačová hlava
1300739	1300739 ND WS C2960 24TC S
1300904	1300904 ND batéria do UPS
1300894	1300894 ND batérie do MC 9094
1300969	1300969 ND batéria do UPS
1300934	1300934 ND UTP kábel lanko, Equip,Cat.5e
1301000	1301000 ND batéria do UPS
1300795	1300795 Oprava tlač. HPLJ 1300
1300905	1300905 Oprava tlač. HPLJ 1320n
1300913	1300913 Oprava tlač. HPLJ 1300
1300472	1300472 Oprava tlač. WN 4915xe
1300941	1300941 Oprava tlač. HPLJ 13001
1300948	1300948 Oprava tlač. WN 4915xe
1300949	1300949 Oprava tlač. WN 4915xe
1300461	1300461 Oprava tlač. WN 4915xe
1300462	1300462 Oprava tlač. WN 4915xe
1300782	1300782 Oprava UPS SMART 10001 NET
1300882	1300882 Oprava tlač. WN 4915xe
1300906	1300906 Oprava monitora HP L1740
1300912	1300912 Oprava tlač. HPLJ 1320n
1300914	1300914 Oprava tlač. Epson FX 890
1300908	1300908 Oprava tlač. HP CLJ 2600
1301002	1301002 Oprava tlač. WN 4915xe
1301004	1301004 Oprava tlač. WN 4915xe
1300709	1300709 ND OPC Drum Cartridge L7032
1300589	1300589 ND printhead HPR4915
1300651	1300651 ND backup battery pack
1300842	1300842 ND HDD dc7900
1300852	1300852 ND Pravý bok traktora FX890
1300960	1300960 ND Ovládací panel Epson FX 8
1301003	1301003 ND batéria do UPS APC BE 700
1300502	1300502 Oprava tlačiarne Wincor HPR49
1300630	1300630 Oprava tlačiarne Wincor HPR49
1300631	1300631 Oprava tlačiarne Wincor HPR49
1300755	1300755 Oprava tlačiarne Wincor HPR49
1300793	1300793 Oprava tlačiarne Wincor HPR49
1300871	1300871 Oprava tlačiarne Wincor HPR49
1300629	1300629 Oprava tlačiarne Wincor HPR49
1300748	1300748 Oprava tlačiarne HP LJ2430TN
1300847	1300847 Oprava tlačiarne FX 890
1300848	1300848 Oprava MTF HP LJ M1522
1301012	1301012 Oprava monitora HP L1706
1300565	1300565 Oprava TALLY 5023+
1300937	1300937 Oprava WN 4915xe
1300614	1300614 Oprava WN 4915xe
1301001	1301001 ND switch 8 port,100MB
1301008	1301008 ND batéria,adaptér
1301082	1301082 ND adaptér
1301121	1301121 ND Zyxell Desktop switch
1301029	1301029 oprava snímača Motorola MC9094
1300976	1300976 oprava tlačiarne EPSON FX890
1301109	1301109 oprava tl. HighPrint 4915xe
1301142	1301142 oprava tlačiarne EPSON FX890

1300621	1300621 oprava tlačiarnie EPSON FX890
1300982	1300982 baterie pre UPS APC ES700
1300818	1300818 oprava tlačiarnie EPSON FX890
1300989	1300989 oprava tl. HighPrint 4915xe
1301026	1301026 oprava switch 8port
1301027	1301027 oprava switch 24port
1300924	1300924 baterie pre UPS APC ES700
1300566	1300566 Oprava tlačiarnie Wincor HPR49
1300746	1300746 Oprava tlačiarnie Wincor HPR49
1300747	1300747 Oprava tlačiarnie Wincor HPR49
1300789	1300789 Oprava tlačiarnie Epson FX 890
1301014	1301014 Oprava tlačiarnie Wincor HPR49
1301058	1301058 Oprava tlačiarnie HP P2015dn
1301170	1301170 Oprava tlač.Epson FX 890
1301079	1301079 Oprava PC HP Compaq dc7900
1301148	1301148 Oprava tlač.WN4915xe
1301052	1301052 Oprava tlač.HP CLJ 2600
1300637	1300637 Oprava tlač.Epson FX 890
1301258	1301258 ND zákl. doska na tlač. WN4915xe
1301202	1301202 ND zdroj do PC HPdc 7600
1301239	1301239 ND HDD
1301119	1301119 ND batéria do UPS ES 550
1301305	1301305 ND HDD
1301308	1301308 ND 4ks batéria do UPS 2200
1301309	1301309 ND batéria do UPS 700
1301311	1301311 ND 4ks batéria do UPS 2200
1301324	1301324 ND batéria do notebooku HP 6710b
1301201	1301201 Oprava tlač.WN 4915xe
1301185	1301185 Oprava tlač. HP LJ 1320n
1301287	1301287 Oprava tlač. HP 1300
1301286	1301286 Oprava tlač. HP 1300
1300938	1300938 Oprava PC HP xw4400
1301348	1301348 servis záložného zdroja APC
1301359	1301359 servis záložného zdroja APC
1301146	1301146 ND OMNIKEY 3121
1301178	1301178 ND ST500DM002 Seagate Barra
1301182	1301182 ND batéria Motorola MC9094,
1301183	1301183 ND batéria Motorola MC9094,
1301219	1301219 ND batéria HR1234W
1301220	1301220 ND batéria HR1234W
1301066	1301066 Oprava tlačiarnie HP LJ1200
1301128	1301128 Oprava tlačiarnie HP LJ 1300
1301129	1301129 Oprava tlačiarnie HP LJ 1320n
1301165	1301165 Oprava tlačiarnie HP LJ2055dn
1301174	1301174 Oprava tlačiarnie Epson FX890
1301216	1301216 Oprava tlačiarnie WN HPR 4915x
1301304	1301304 ND batéria do UPS ES 700
1300740	1300740 ND batéria do UPS ES 700
1300636	1300636 Oprava tlač.Epson FX 890
1300625	1300625 Oprava skenera Metrolog. MS 9535
1301257	1301257 T ransfer charger
1301257	1301257 Main charger
1301391	1301391 Optický valec PC cartridge PP4050 S/PC51
1301391	1301391 Developer Kit PP4050
1301391	1301391 Fuser Kit PP 4050 S/FK54
1301228	1301228 oprava UPS APC 1000
1301275	1301275 oprava tlač. HighPrint 4915xe
1300998	1300998 oprava monitora HP1706
1301144	1301144 oprava tl.WN HighPrint 4915xe

1301366	1301366 oprava monitora HP1940
1301222	1301222 ND 3 ks baterie 9Ah
1301213	1301213 oprava OMNIKEY 3121
1301267	1301267 Oprava tlač. HP LJ 1320n
1301356	1301356 Oprava monitora HP L 1940
1301298	1301298 ND základná doska
1301307	1301307 ND monitor
1301340	1301340 ND batéria do UPS APC ES700
1301345	1301345 ND HDD
1301353	1301353 ND RAM
1301354	1301354 ND HDD
1301384	1301384 ND RAM
1301306	1301306 Oprava tlač.WN 4915xe
1301355	1301355 Oprava tlač.HP LJ 1300
1301328	1301328 Oprava tlač.WN 4915xe
1301342	1301342 Oprava tlač.WN 4915xe
1301285	1301285 Oprava tlač.WN 4915xe
1301293	1301293 Oprava tlač.WN 4915xe
1301385	1301385 Oprava tlač.WN 4915xe
1301503	1301503 Oprava tlač.WN 4915xe
1301471	1301471 ND zdroj
1301473	1301473 ND batéria do notebooku
1301475	1301475 ND batéria do UPS APC 750XL
1301488	1301488 ND napájací adaptér pre notebook
1301494	1301494 ND napájací adaptér pre notebook
1301310	1301310 ND batéria do notebooka
1301043	1301043 Oprava tlačiarne FX 890
1301169	1301169 Oprava tlačiarne FX 890
1301206	1301206 Opr. tlač. Printronix L7032
1301214	1301214 Oprava tlačiarne Epson FX 890
1301252	1301252 Oprava tlač. Wincor HPR4915xe
1301260	1301260 Oprava tlačiarne FX890
1301339	1301339 Oprava tlačiarne HP LJ2055dn
1301341	1301341 Oprava tlačiarne HP LJ1320
1301364	1301364 Oprava tlačiarne HP LJ 1320n
1301254	1301254 ND - monitor HP Compaq
1301276	1301276 ND tlač.hlava na WN HPR4915xe
1301338	1301338 ND ribbon mask set FX890
1301373	1301373 ND tlač.hlava na WN HPR4915xe
1301374	1301374 ND dátový kábel WN HPR4915xe
1301378	1301378 - ND monitor HP Compaq
1301539	1301539 servis záložného zdroja APC
1301544	1301544 servis záložného zdroja APC
1301292	1301292 Oprava tlač.WN 4915xe
1301441	1301441 Oprava monitora HP L1908w
1301455	1301455 Oprava monitora L 1506
1301496	1301496 Oprava monitora L 1706
1301514	1301514 Oprava monitora L 1706
1301367	1301367 ND Photoreceptor drum L5535
1301567	1301567 ND RAM
1301568	1301568 ND HDD
1301551	1301551 ND HDD
1301552	1301552 ND RAM
1301639	1301639 ND batéria do UPS ES 700
1301737	1301737 ND batéria do UPS ES 700
1301745	1301745 ND batéria do UPS ES 700
1301805	1301805 ND batéria do UPS ES 700
1301550	1301550 ND mouse
1301386	1301386 Oprava tlač.WN 4915xe

1301448	1301448 Oprava tlač.WN 4915xe
1301466	1301466 Oprava tlač.HP 2055dn
1301472	1301472 Oprava tlač. HP LJ 1100
1301555	1301555 Oprava monitora HP L1706
1301570	1301570 Oprava tlač.WN 4915xe
1301630	1301630 Oprava monitora HP L1706
1301549	1301549 ND batéria do NB HP 6710b
1301205	1301205 Oprava tlačiarne HP LJ 1200
1301326	1301326 Oprava tlačiarne HP LJ 1320n
1301346	1301346 Oprava tlačiarne HP LJ 1320n
1301597	1301597 Oprava tlačiarne HP LJ 1320n
1301625	1301625 ND batéria HR1234W
1301626	1301626 ND batéria HR1234W
1301720	1301720 ND dc7900 HDD Seagate SV35
1301621	1301621 407419 001EXC
1301381	1301381 oprava tlač. WN HighPrint 4915
1301402	1301402 oprava tlač. HP 1320n
1301417	1301417 oprava Switch 16port
1301569	1301569 Oprava tlač.Epson FX 890
1301633	1301633 Oprava tlač.Epson FX 890
1301743	1301743 Oprava tlač.Epson FX 890
1301744	1301744 Oprava tlač.Epson FX 890
1301746	1301746 Oprava tlač.WN 4915xe
1301798	1301798 Oprava tlač.Epson FX 890
1301711	1301711 Oprava tlač.Epson FX 890
1301713	1301713 Oprava tlač.Epson FX 890
1301824	1301824 Oprava tlač.WN 4915xe
1301825	1301825 Oprava monitora HP L1706
1301842	1301842 Oprava tlač.WN 4915xe
1301784	1301784 Oprava tlač.WN 4915xe
1301498	1301498 Oprava tlač.Epson FX 890
1301930	1301930 Oprava docking station
1301902	1301902 ND USB klávesnice
1301903	1301903 ND HDD
1301904	1301904 ND hlava do tlačiarne
1301009	1301009 ND ľavá a pravá časť traktora
1301491	1301491 ND batéria do notebooku 6710b
1301547	1301547 ND pre EPSON valčeky
1301484	1301484 oprava tlač WNHighPrint 4915xe
1301510	1301510 MD mouse pre PC 5 ks
1301511	1301511 ND baterie pre UPS
1301573	1301573 oprava PC HP7800 HDD
1301542	1301542 ND developer kit pre tl. L7032
1301650	1301650 ND SM developer kit pre L7032
1301652	1301652 ND OPC MODULE kit pre L7032
1301773	1301773 oprava tl. WNHighPrint4915xe
1301774	1301774 oprava tl. Tally 5023+
1301673	1301973 oprava čítačky OMNIKEY3121
1301933	1301953 oprava monitora HP 1901w
1301803	1301803 Oprava tlač. Epson FX 890
1301804	1301804 Oprava tlač. HP LJ 1300
1301929	1301929 Oprava tlač. HP LJ 1320n
1301808	1301808 Oprava čítačky čip.karier
1301809	1301809 Oprava čítačky čip.karier
1302012	1302012 Oprava monitora HP L1706
1302019	1302019 Oprava monitora HP L1908w
1302013	1302013 Oprava PC HP Compaq dc 7800
1301838	1301838 Oprava tlač. Epson FX 890
1301837	1301837 Oprava tlač. Epson FX 890

1302053	1302053 Oprava tlač. WN4915xe
1301987	1301987 ND klávesnice
1301834	1301834 ND batéria do UPS
1301853	1301853 ND batéria do UPS
1302010	1302010 ND batéria do UPS
1302014	1302014 ND zdroj
1302016	1302016 ND zdroj
1302015	1302015 ND zdroj
1302017	1302017 ND zdroj
1302052	1302052 ND základná doska
1302050	1302050 Oprava tlač.WN 4915xe
1302103	1302103 Oprava tlač. HP LJ 2015dn
1302113	1302113 Oprava tlač.WN 4915xe
1301925	1301925 Oprava snímača Motorola MC9094
1302117	1302117 Oprava tlač. Epson FX 890
1302081	1302081 Oprava monitora HP L1710
1302082	1302082 Oprava tlač. HP LJ 1300
1302107	1302107 Oprava tlač.WN 4915xe
1302159	1302159 Oprava tlač.WN 4915xe
1302068	1302068 oprava monitora HP 1940
1302118	1302118 oprava notebook HP 6710b
1302122	1302122 oprava notebook HP 6710b
1302140	1302140 ND kliešte pre LAN
1302158	1302158 oprava monitora HP 1940
1302182	1302182 oprava notebook HP 6710b
1302183	1302183 oprava tl.Wincor HighPrint4915
1302314	1302314 oprava PC HP7600
1301483	1301483 oprava tl. Epson FX890
1301485	1301485 oprava tlač. HP 2055dn
1301486	1301486 oprava tl. Epson FX890
1301983	1301983 oprava tl.Wincor HighPrint4915
1301984	1301984 oprava tl. Epson FX890
1301985	1301985 oprava tl. Epson FX890
1301986	1301986 oprava čítačky OMNIKEY3121
1301076	1301076 Oprava tlač. PrintronixL5535
1301215	1301215 Oprava tlačiarne Epson FX 890
1301572	1301572 Oprava tlačiarne HP CJ2605dn
1301719	1301719 Oprava tlač.Wincor HPR4915xe
1301623	1301623 Oprava tlačiarne Epson FX 890
1301913	1301913 Oprava tlačiarne HP LJ1320n
1301922	1301922 Oprava tlačiarne Tally T5023+
1301944	1301944 Oprava tlač. Wincor HPR4915xe
1301957	1301957 Oprava tlačiarne HP LJ2300
1302184	1302184 Oprava tlačiarne Epson FX 890
1301750	1301750 ND batéria HR1234W
1301821	1301821 ND batéria HR1234W
1301830	1301830 ND batéria HR1234W
1301831	1301831 ND batéria HR1234W
1301965	1301965 ND batéria HR1234W
1302066	1302066 ND batéria HR1234W
1302191	1302191 ND DVD RW/RAM SATA Black 24
1302191	1302191 ND DVD RW/RAM SATA Black 24
1301575	1301575 oprava Metrologic MS9520
1302048	1302048 oprava monitora HP 1706
1301512	1301512 oprava tl. Epson FX890
1302124	1302124 oprava switch 3COM
1302127	1302127 oprava tl.Wincor HighPrint4915
1302162	1302162 Oprava tlač.WN 4915xe
1302198	1302198 Oprava tlač. HP LJ P2055dn

1302179	1302179 Oprava tlač. WN4915xe
1302172	1302172 Oprava monitora HP L1706
1302173	1302173 Oprava HP DC 7600 SFF
1302352	1302352 Oprava monitora HP L1908w
1302279	1302279 Oprava monitora HP L1940
1302244	1302244 ND adapter k NTB
1302247	1302247 ND tlačová hlava
1301863	1301863 Oprava skenera MS9535
1302047	1302047 Oprava tlač. Tally T5023+
1302116	1302116 Oprava tlač. HP LJ4200tn
1302196	1302196 Oprava tlač. WN 4915xe
1302181	1302181 Oprava tlač.Epson FX 890
1302224	1302224 Oprava tlač.Epson FX 890
1302204	1302204 Oprava tlač. Epson FX 890
1302334	1302334 Oprava tlač.WN 4915xe
1302388	1302388 Oprava monitora HP L1908w
1302349	1302349 Oprava tlač. Epson FX 890
1302351	1302351 Oprava tlač.WN 4915xe
1302215	1302215 Oprava tlač. Epson FX 890
1302318	1302318 Oprava tlač. Epson FX 890
1302248	1302248 Oprava tlač. Epson FX 890
1302180	1302180 ND switch
1302250	1302250 ND batéria do UPS
1302344	1302344 ND foil carier assy
1302366	1302366 ND HDD
1302347	1302347 ND batéria do UPS
1302348	1302348 ND RAM
1302384	1302384 ND batéria do UPS
1302454	1302454 ND pamäť pre notebook
1302444	1302444 ND mouse
1302403	1302403 ND batéria do UPS
1302549	1302549 ND tlačová hlava
1302272	1302272 Oprava tlač. HP LJ 1300
1302273	1302273 Oprava tlač.Epson FX 890
1302276	1302276 Oprava tlač.WN 4915xe
1302246	1302246 oprava tl.Wincor HighPrint4915
1302302	1302302 oprava čítačky OMNIKEY3121
1302443	1302443 oprava tlač. HP 1320n
1302445	1302445 ND baterie do UPS BE 700FR
1302213	1302213 oprava Motorola MC9094
1302125	1302125 oprava PC HP 7800
1302207	1302207 oprava tl.Wincor HighPrint4915
1302307	1302307 ND ASUS switcg 10x10/100
1302418	1302418 ND baterie do UPS BE 700
1302419	1302419 oprava PC HP 8000
1302482	1302482 ND USB kabel 10ks
1302464	1302464 Oprava tlač.WN 4915xe
1302481	1302481 Oprava tlač. HP LJ M1522nf
1302380	1302380 Oprava tlač.WN 4915xe
1302382	1302382 Oprava tlač.WN 4915xe
1302416	1302416 Oprava tlač.WN 4915xe
1302508	1302508 Oprava tlač.WN 4915xe
1302381	1302381 Oprava tlač.WN 4915xe
1302280	1302280 Oprava UPS APC SUA 1000XLI
1302281	1302281 Oprava UPS APC SMART I NET1000
1302598	1302598 Oprava tlač. WN 4915xe
1302506	1302506 Oprava tlač. HP LJ 2600N
1301431	1301431 ND FUSER BASE ASSEMBLY L7032
1301962	1301962 ND Ovládací panel Epson FX 890



1301963	1301963 ND Ovládací panel Epson FX 890
1301978	1301978 ND Ovládací panel Epson FX 890
1302341	1302341 ND tlačová hlava na WN HPR4915
1302455	1302455 ND batéria HR1234W
1301887	1301887 Oprava skenera Ricoh I760D
1301996	1301996 Oprava tlačiarne WN HPR4915xe
1302135	1302135 Oprava tlačiarne FX 890
1302300	1302300 Oprava tlačiarne WN HPR4915xe
1302450	1302450 Oprava tlačiarne HP LJ1300
1302212	1302212 ND klávesnica
1302212	1302212 ND pamäť RAM
1302212	1302212 ND pamäť RAM
1301910	1301910 oprava skenera Motorola MC9094
1302389	1302389 oprava tl. Epson FX890
1302693	1302693 oprava tlač. HP LaserJet 2015
1302424	1302424 oprava tl. Epson FX890
1302778	1302778 oprava tlač. HP 1320n
1302800	1302800 oprava tl. Epson FX890
1302897	1302897 oprava Metrologic MS9520
1302421	1302421 oprava tl. Epson FX890
1302523	1302523 ND pre tlač. Printronis 5535
1302633	1302633 ND kable
1303010	1303010 ND batéria pre Motorola MC9094
1302642	1302642 ND kable redukcie
1302914	1302914 Oprava tlač. HP LJ 2430TN
1302528	1302528 Oprava snímača Focus MS1690
1302385	1302385 Oprava snímača Focus MS1690
1302795	1302795 Oprava tlač.WN 4915xe
1302772	1302772 Oprava tlač.WN 4915xe
1302931	1302931 Oprava monitora HP L1908w
1302614	1302614 Oprava tlač. HP LJ 1320n
1302463	1302463 ND batéria do UPS ES 700
1302387	1302387 ND ľavá a pravá časť traktora
1302583	1302583 ND batéria do UPS ES 700
1302722	1302722 ND foil carrier assy
1302765	1302765 ND set of head cable
1302783	1302783 ND HDD
1302801	1302801 ND batéria do UPS ES 700
1302848	1302848 ND HDD
1302828	1302828 ND USB myši
1302909	1302909 ND batéria do UPS ES 700
1302913	1302913 ND HDD
1302995	1302995 ND kábel PV 102
1303043	1303043 ND batéria do UPS APC 750XL
1303044	1303044 ND hlava do tlač.WN 4915xe
1302651	1302651 Oprava tlač. HP LJ CP35050dn
1302707	1302707 Oprava monitora HP L1908w
1302779	1302779 Oprava PC HP dc7600
1302792	1302792 Oprava monitora HP L1908w
1302802	1302802 Oprava PC HP 7900
1302569	1302569 Oprava tlač. MT 5023+
1302570	1302570 Oprava tlač.Epson FX 890
1302711	1302711 Oprava tlač. HP LJ 1320n
1302717	1302717 Oprava tlač. HP LJ 1320n
1302718	1302718 Oprava PC HP 7600
1302719	1302719 Oprava PC HP 7600
1302910	1302910 Oprava tlač.WN 4915xe
1302912	1302912 Oprava PC HP 8000 ELITE
1302915	1302915 Oprava tlač. Epson FX 890

1302917	1302917 Oprava tlač. Espon FX 890
1302918	1302918 Oprava tlač. T5023
1302919	1302919 Oprava tlač. Epson FX 890
1302947	1302947 Oprava tlač. Epson FX 890
1303102	1303102 Oprava tlač.WN 4915xe
1303061	1303061 ND switch
1303079	1303079 ND HDD
1303098	1303098 ND batéria do UPS ES 700
1303099	1303099 ND pamäť pre notebook
1303101	1303101 ND batéria do UPS APC 1400
1303081	1303081 ND batéria do UPS ES 700
1303123	1303123 ND batéria do UPS ES 700
1302467	1302467 Oprava tlač. Epson FX 890
1302781	1302781 Oprava tlač. HP deskjet 9800
1303154	1303154 Oprava UPS ES 700
1303157	1303157 Oprava tlač.WN 4915xe
1303016	1303016 Oprava tlač. HP LJ 1320n
1303085	1303085 Oprava monitora HP 1706
1303086	1303086 Oprava HP PC DC 7800Sff
1302997	1302997 Oprava tlač. HP LJ 1320n
1303166	1303166 Oprava PC DL 360 G5
1302185	1302185 Oprava tlačiarne Epson FX 890
1302437	1302437 Oprava tlačiarne WincorHPR4915
1302542	1302542 Oprava tlačiarne HP LJ P2015dn
1302604	1302604 Oprava tlačiarne WincorHPR4915
1302609	1302609 Oprava tlačiarne Epson FX 890
1302610	1302610 Oprava tlačiarne WincorHPR4915
1302611	1302611 Oprava tlačiarne WincorHPR4915
1302612	1302612 Oprava tlačiarne Epson FX 890
1302696	1302696 Oprava NB Compaq 6710b
1302771	1302771 Oprava tlačiarne WincorHPR4915
1302927	1302927 Oprava tlačiarne WincorHPR4915
1302470	1302470 ND ľavý bok traktora FX890
1302498	1302498 ND ovládací panel FX890
1302605	1302605 ND kábel k tlač.hlave WN4915xe
1302639	1302639 ND batéria HR1234W
1302847	1302847 ND batéria HR1234W
1302963	1302963 ND tlač.hlavaWN HPR4915xe+kab.
1302990	1302990 ND tlačová hlava na WN HPR4915
1303020	1303020 ND ľavý bok traktora FX890
1303046	1303046 ND horný podavač pap. FX 890
1303047	1303047 ND horný podavač pap. FX 890
1303048	1303048 ND horný podavač pap. FX 890
1303163	1303163 ND PSU 240WHP Compaq dc8000SFF
1303237	1303237 ND batéria HR1234W
1303140	1303140 ND switch
1303250	1303250 ND batéria do UPS ES 700
1303252	1303252 ND batéria do UPS ES 700
1303136	1303136 ND HDD
1303156	1303156 ND RAM
1302941	1302941 Oprava tlač. HP LJ1010
1303179	1303179 Oprava tlač. MT 5023+
1302710	1302710 oprava PC HP8000 elite
1302844	1302844 oprava PC HP8000 elite
1303118	1303118 oprava PC HP8000 elite
1303207	1303207 oprava sčk Metrologic MS1690
1301482	1301482 oprava sčk Metrologic MS9520
1301487	1301487 oprava skenera Motorola MC9094
1302077	1302077 oprava Symbol dock station

1302896	1302896 oprava tl. Epson FX890
1303001	1303001 oprava tl. WN HighPrint 4915xe
1302856	1302856 oprava tlač. HP 2015
1302965	1302965 Oprava notebooku ACER 3810T
1303627	1303627 profylakt.zar.ITSMDBS1,ITSMDBS2,LOGISSMS
1303715	1303715 403781 001 ND SPS Power Supply 1000W
1303530	1303530 Carepack
1303199	1303199 oprava tl. WN HighPrint 4915xe
1303226	1303226 oprava tl. WN HighPrint 4915xe
1303227	1303227 oprava tl. WN HighPrint 4915xe
1303228	1303228 oprava tl. Epson FX890
1303229	1303229 ND switch 8 port
1303585	1303585 oprava tl. WN HighPrint 4915xe
1303603	1303603 ND dock station Motorola
1303650	1303650 oprava tl. HP LJ 2300dn
1303657	1303657 oprava PC HP 7600
1303718	1303718 servis záložného zdroja APC 1303718
1303873	1303873 oprava monitora 1303873
1302682	1302682 ND nabíjačka k MS9520
1303464	1303464 ND batéria do UPS ES 700
1303467	1303467 ND optické myši
1303555	1303555 ND HDD
1303592	1303592 ND batéria do UPS ES 700
1303621	1303621 ND batéria do Motoroly MC75A
1303622	1303622 ND batéria do UPC ES 700
1303640	1303640 ND UTP kábel lanko
1303674	1303674 ND HDD
1303692	1303692 ND nap.adaptér pre notebook
1303730	1303730 ND batéria do UPS ES 700
1302950	1302950 Oprava UPS APC RMI 1400 2Ut
1303223	1303223 Oprava scanera HP N8460
1303241	1303241 Oprava tlač.WN 4915xe
1303376	1303376 Oprava tlač.WN 4915 xe
1303428	1303428 Oprava tlač.Epson FX 890
1303432	1303432 Oprava tlač. WN 4915xe
1303468	1303468 Oprava tlač.WN 4915xe
1303469	1303469 Oprava tlač.Epson FX 890
1303543	1303543 Oprava tlač. HP LJ 2430
1303546	1303546 Oprava tlač. HP LJ 2015dn
1303548	1303548 Oprava tlač. HP LJ 1522
1303549	1303549 Oprava tlač. Epson FX 890
1303568	1303568 Oprava tlač.WN 4915xe
1303571	1303571 Oprava čít.čip.kariet OMNIKEY
1303572	1303572 Oprava čít.čip.kariet OMNIKEY
1303573	1303573 Oprava čít.čip.kariet OMNIKEY
1303594	1303594 Oprava čít.čip.kariet OMNIKEY
1303595	1303595 Oprava tlač. HP LJ 2600N
1303636	1303636 Oprava tlač. Epson FX 890
1303696	1303696 Oprava tlač. HP LJ 2600
1303735	1303735 Oprava monitoru HP L1706
1302925	1302925 Oprva Wincor Nixdorf
1303198	1303198 Oprava tlačiarne Tally T5023+
1303328	1303328 Oprava Epson FX890
1303400	1303400 Oprava tlač. Wincor HPR4915xe
1303401	1303401 Oprava tlač. Wincor HPR4915xe
1303597	1303597 Oprava tlač. Wincor HPR4915xe
1303637	1303637 Oprava tlač. Wincor HPR4915xe
1303078	1303078 ND procesor 508255 001
1303547	1303547 ND Honeywell Xenon 1900 USB

1303651	1303651 ND Honeywell Xenon 1900 USB
1303652	1303652 ND Honeywell Xenon 1900 USB
1303694	1303694 ND OMNIKEY 3121
1303706	1303706 ND XN374AA HP 2006x
1302245	1302245 ND HP LJP2015 Tray2
1303261	1303261 ND Opticky valec PC cartridge
1303313	1303313 ND XN374AA HP 2006
1303402	1303402 ND WD2500AAKX
1303421	1303421 ND XN374AA HP 2006x
1303535	1303535 ND batéria HR1234W
1303727	1303727 ND batéria HR1234W
1303729	1303729 ND bateria GP12120
1303528	1303528 ND batéria do UPS ES 700
1303631	1303631 ND tractor assy
1303634	1303634 ND hlava do tlačiarnie FX 890
1303775	1303775 ND káble k váham
1303842	1303842 ND batéria do UPS ES 700
1303860	1303860 ND batéria do UPS ES 700
1303866	1303866 ND batéria do UPS ES 700
1303846	1303846 ND switch 8 port
1303888	1303888 ND batéria do UPS ES 700
1303981	1303981 ND batéria do UPS ES 700
1303633	1303633 Oprava tlač. WN 4915xe
1303693	1303693 Oprava tlač. HP OfficeJet 5610
1303731	1303731 Oprava snímača MS 9520
1303737	1303737 Oprava tlač. HP LJ 1300
1303700	1303700 Oprava UPS APC 1000Net
1303701	1303701 Oprava UPS APC 600Rmi
1303862	1303862 Oprava tlač. WN 4915xe
1303863	1303863 Oprava tlač. Espon FX 890
1303830	1303830 Oprava tlač. HP LJ P2055dn
1303831	1303831 Oprava tlač. Epson FX 890
1303909	1303909 Oprava tlač. WN 4915xe
1303907	1303907 Oprava tlač. WN 4915xe
1303929	1303929 Oprava tlač. Epson FX 890
1303930	1303930 Oprava tlač. WN 4915xe
1304069	1304069 ND HDD
1304080	1304080 ND batéria do UPS ES 700
1303897	1303897 ND predlžovací kábel 3m USB
1303898	1303898 ND myš
1303899	1303899 ND tf.kábel 4žil + konektory
1304091	1304091 ND monitor
1304124	1304124 ND HDD
1304157	1304157 ND HDD
1303990	1303990 ND batéria do UPS ES 700
1303923	1303923 ND napájací zdroj
1304224	1304224 ND RAM
1304198	1304198 ND základná doska
1304199	1304199 ND monitor
1304200	1304200 ND monitor
1304201	1304201 ND klávesnice
1304250	1304250 ND batéria do UPS ES 700
1303934	1303934 Oprava tlač.WN 4915xe
1304043	1304043 Oprava tlač.Epson FX 890
1304044	1304044 Oprava tlač.Epson FX 890
1304104	1304104 Oprava tlač.Epson FX 890
1304090	1304090 Oprava tlač. HP LJ 1005
1304152	1304152 Oprava tlač. HP 1320
1303725	1303725 Oprava PC HP Compaq dc7900

1303939	1303939 ND tlačová hlava
1304241	1304241 ND napájací zdroj
1304331	1304331 ND batéria do UPS ES 700
1304332	1304332 ND HDD
1304351	1304351 ND batéria do UPS ES 700
1303635	1303635 Oprava tlačiarne Epson FX 890
1303638	1303638 Oprava tlačiarne Epson FX 890
1303677	1303677 Oprava tlačiarne WN HPR 4915xe
1303684	1303684 Oprava tlačiarne WN HPR 4915xe
1303802	1303802 Oprava scannera MS9520
1303849	1303849 Oprava tlačiarne WN HPR 4915xe
1303867	1303867 Oprava tlačiarne WN HPR 4915xe
1303874	1303874 Oprava tlačiarne WN HPR 4915xe
1304005	1304005 Oprava tlačiarne Epson FX890
1304006	1304006 Oprava tlačiarne Epson FX 890
1304076	1304076 Oprava tlačiarne Epson FX 890
1301140	1301140 oprava tl. Epson FX890
1303665	1303665 oprava tl. Epson FX890
1303717	1303717 oprava tl. WN HighPrint 4915xe
1303780	1303780 oprava monitora HP1506
1303803	1303803 ND LAN karta
1303813	1303813 ND PC myš
1303890	1303890 oprava tl. Epson FX890
1303891	1303891 ND bateria pre UPS ES700
1303912	1303912 ND pre HP LJ P2055
1304108	1304108 oprava monitora HP1706
1303168	1303168 ND batéria 443885 001 6cell/
1303308	1303308 ND Epson FX 890 traktor set
1303728	1303728 ND batéria CR2032, 3V
1303762	1303762 ND L7032 Developer Unit
1303762	1303762 ND L7032 Developer Mix
1303779	1303779 ND batéria HR1234W
1303782	1303782 ND batéria HR1234W
1303791	1303791 ND bateria GP12120
1304049	1304049 ND batéria HR1234W
1304075	1304075 ND print head 4915xe
1304110	1304110 ND D Link DGE 528T Gigabit
1304155	1304155 ND batéria HR1234W
1304172	1304172 ND set of head cableHPR4915xe
1303933	1303933 Oprava snímača MS 1960
1303936	1303936 Oprava tlač.WN 4915xe
1303838	1303838 Oprava tlač.WN 4915xe
1304081	1304081 Oprava tlač.Epson FX 890
1304082	1304082 Oprava tlač.Epson FX 890
1303870	1303870 Oprava tlač.WN 4915xe
1304092	1304092 Oprava snímača MS 9535
1304265	1304265 Oprava tlač. HP LJ P2015dn
1303165	1303165 Oprava UPS APC RMI 700
1304260	1304260 Oprava tlač.Epson FX 890
1303738	1303738 ND čítačka OMNI KEY
1303751	1303751 oprava tl. HP ColorLJ3800dn
1303800	1303800 oprava PC HPcompaq 7600
1303864	1303864 oprava monitora HP1706
1303869	1303869 oprava snímačč MS9520
1303901	1303901 oprava tl. WN HighPrint 4915xe
1304045	1304045 ND čítačka OMNI KEY
1304093	1304093 oprava tl. HP LJ 1200
1304161	1304161 ND bateria pre HP Probook
1304196	1304196 oprava PC HP Compaq7600

1304335	1304335 ND SPS BD baterie
1304499	1304499 oprava záložného zdroja APC 1304499
1304553	1304553 Náhradný diel HDD
1304386	1304386 ND OMNIKEY 3121
1304396	1304396 ND hlava do tlačiarne
1304397	1304397 ND hlava do tlačiarne
1304283	1304283 ND RAM,zákl.doska
1304529	1304529 ND monitor
1304541	1304541 ND batéria do UPS ES 700
1304491	1304491 ND HDD
1304492	1304492 ND HDD
1304133	1304133 ND zdroj,zákl.doska
1304580	1304580 ND monitor
1304601	1304601 ND monitor
1304603	1304603 ND myši
1304626	1304626 ND OMNIKEY 3121
1304606	1304606 ND RAM
1304197	1304197 ND káble k váham
1304307	1304307 ND Developer kit PP 4050
1303628	1303628 Oprava tlačiarne HP LJ 1200
1303639	1303639 Oprava tlačiarne Epson FX 890
1304032	1304032 Oprava tlačiarne Epson FX 890
1304051	1304051 Oprava dock station Motorola
1304055	1304055 Oprava snímača ČK MS9520
1304156	1304156 Oprava tlačiarne Epson FX 890
1304230	1304230 Oprava tlačiarne WN HPR 4915xe
1304249	1304249 Oprava tlačiarne HP LJ 1320n
1304565	1304565 Oprava nb HP Compaq 6710
1303991	1303991 ND Ovládací panel Epson FX 890
1304111	1304111 ND optická myš
1304235	1304235 ND tlačová hlava WN HPR4915xe+
1304236	1304236 ND zákl. doska na WN HPR4915xe
1304257	1304257 ND batéria Motorola MC9094
1304309	1304309 ND OPC Drum Cartridge L7032
1304349	1304349 ND batéria HR1234W
1304478	1304478 ND batéria HR1234W
1304527	1304527 ND batéria HR1234W
1303805	1303805 ND pre tl. Epson FX890
1303920	1303920 ND baterie UPS ES 700
1304403	1304403 oprava tl. Epson FX890
1304407	1304407 ND Switch
1304408	1304408 ND klavesnice pre PC
1304408	1304408 ND mouse pre PC
1304487	1304487 oprava PC monitor
1304137	1304137 Oprava snímača MS 9520
1304342	1304342 Oprava tlač. Epson FX 890
1304370	1304370 Oprava tlač.WN 4915xe
1304293	1304293 Oprava tlač. Epson FX 890
1304392	1304392 Oprava snímača MS 1690
1304395	1304395 Oprava tlač.WN 4915xe
1304398	1304398 Oprava tlač. Epson FX 890
1304400	1304400 Oprava tlač. Epson FX 890
1304402	1304402 Oprava tlač. Epson FX 890
1304301	1304301 Oprava tlač.WN 4915xe
1304494	1304494 Oprava tlač. HP LJ 1200
1304333	1304333 ND HDD
1304632	1304632 ND batéria do UPS APC ES 700
1304674	1304674 ND batéria do UPS APC ES 700
1304733	1304733 ND HDD

1304742	1304742 ND kábel k váham
1304607	1304607 ND RAM
1304754	1304754 ND batéria do notebook. 6710b
1304746	1304746 ND batéria do netobook. 6710b
1304749	1304749 ND optické myši
1304784	1304784 ND batéria do UPS APC ES 700
1304808	1304808 ND batéria do UPS APC ES 700
1304832	1304832 ND klávesnica+ myš
1304613	1304613 ND monitor
1304890	1304890 ND monitor
1304920	1304920 ND batéria do UPS APC ES 700
1304880	1304880 ND monitor
1305005	1305005 ND patch káble
1305007	1305007 ND zdroj
1305025	1305025 ND HDD
1304980	1304980 ND RAM
1304881	1304881 ND HDD + batéria
1305091	1305091 ND HDD
1304631	1304631 Oprava tlač. HPLJ 2055dn
1304938	1304938 Oprava tlač. WN 4915xe
1304532	1304532 Oprava UPS BACK 250EI
1304533	1304533 Oprava UPS APC DLA 1500
1304534	1304534 Oprava UPS APC Back 400
1304536	1304536 Oprava SMART UPS APC 1000
1304537	1304537 Oprava Battery Pack SU 600XL
1304979	1304979 Oprava tlač. HP LJ 2055
1304614	1304614 Oprava tlač. WN 4915xe
1304616	1304616 Oprava tlač. WN 4915xe
1304833	1304833 Oprava PC
1304887	1304887 Oprava tlač. WN 4915xe
1304894	1304894 Oprava tlač. HP LJ 1300
1305033	1305033 Oprava tlač. HP LJ 2015
1305344	1305344 Manhattan kábel, USB 2.0 A
1305344	1305344 2GB . microSD karta GOODRAM
1305093	1305093 130503 ND HDD
1305190	1305190 ND myši
1305191	1305191 ND klávednice
1305192	1305192 ND reproduktory
1305186	1305186 ND monitor
1305101	1305101 ND zdroj k docking station
1305105	1305105 ND HDD
1305173	1305173 ND myši
1304741	1304741 ND kábel k váham
1305113	1305113 ND batéria do UPS APC ES 700
1305132	1305132 ND monitor
1304883	1304883 ND Developer kit PP4050XP
1304882	1304882 ND PC cartridge PP 4050XP
1304568	1304568 Oprava tlač. PSI 4050XP
1303799	1303799 oprava tl. WN HighPrint 4915xe
1303804	1303804 ND pre tl. Epson FX890
1304405	1304405 oprava tl. WN HighPrint 4915xe
1304488	1304488 oprava UPS ES 700
1304489	1304489 oprava tl. WN HighPrint 4915xe
1304788	1304788 oprava tl. WN HighPrint 4915xe
1304926	1304926 ND čítačka OMNI KEY
1304929	1304929 oprava tl. WN HighPrint 4915xe
1303998	1303998 oprav tl. Tally 5023+
1303999	1303999 oprava tl. Epson FX890
1304664	1304664 ND baterie pre HP Compaq6730b

1304780	1304780 oprava tl. Epson FX890
1304819	1304819 oprava tl. WN HighPrint 4915xe
1304915	1304915 oprava tl. WN HighPrint 4915xe
1305013	1305013 oprava tl. Epson FX890
1305017	1305017 oprava SČK Metrologic9520
1305021	1305021 ND switch
1305022	1305022 ND seriový kabel
1303596	1303596 oprava tl. Epson FX890
1303612	1303612 oprava tlač. HP LaserJet 1200
1303613	1303613 oprava skenera Motorola MC9094
1304073	1304073 oprava SČK Focus MS1690
1304276	1304276 ND myš pre PC
1304282	1304282 oprava tl. Epson FX890
1304285	1304285 ND pre tl. WN HighPrint 4915xe
1304415	1304415 oprava tlač. HP LaserJet P2015
1304546	1304546 ND kable VGA
1304567	1304567 oprava PC HP dc7900 SFF
1304589	1304589 ND pre tl. WN HighPrint 4915xe
1304611	1304611 ND Switch
1304789	1304789 ND baterie do UPS ES700
1304790	1304790 ND pre tl. Epson FX890
1304791	1304791 ND Switch
1304793	1304793 ND baterie do UPS APC 1000
1304797	1304797 oprava PC HP 7700
1304919	1304919 ND čítačka Omnikey
1304964	1304964 oprava tl. Epson FX890
1304965	1304965 oprava tl. Epson FX890
1304966	1304966 ND kabel
1304967	1304967 oprava Metrologic MS9520
1305038	1305038 oprava tlač. HP LaserJet 1320
1305043	1305043 ND baterie do Motorola MC9094
1305044	1305044 oprava tlač. HP LaserJet P2055
1305103	1305103 ND čítačka Omnikey
1304474	1304474 Oprava tlačiarne HP LJ P2015dn
1304517	1304517 Oprava tlačiarne WN HPR 4915xe
1304518	1304518 Oprava tlačiarne WN HPR 4915xe
1304558	1304558 Oprava tlačiarne Epson FX 890
1304581	1304581 Oprava tlačiarne WN HPR 4915xe
1304686	1304686 Oprava tlačiarne WN HPR 4915xe
1304721	1304721 Oprava tlačiarne Dell 1110
1304972	1304972 Oprava tlačiarne WN HPR 4915xe
1305056	1305056 Oprava tlačiarne WN HPR 4915xe
1305057	1305057 Oprava tlačiarne HP LJ M1522
1304480	1304480 ND PCEU 43R AXAGO PCI
1304566	1304566 ND I tec MySafe BACKUP USB 2.0
1304735	1304735 ND batéria HR1234W
1304736	1304736 ND batéria HR1234W
1304895	1304895 ND batéria HR1234W
1304927	1304927 ND kábel ku tlač. hlave WN4915
1305081	1305081 ND C9F26AA HP P201
1304029	1304029 Oprava odtrhového stroja
1305212	1305212 oprava tl. WN HighPrint 4915xe
1305225	1305225 ND pre Motorola MC 9094
1305227	1305227 oprava skenera HP ScanJet4070
1305281	1305281 ND Switch
1305386	1305386 ND baterie do UPS APC 1000
1305413	1305413 Oprava notebooku HP 6730b
1305185	1305185 Oprava tlač. HPLJ 1320n
1305310	1305310 Oprava Racku Rital



1305271	1305271 Oprava tlač. Epson FX 890
1305328	1305328 Oprava tlač. HP pP2055
1304628	1304628 Oprava snímača MS 1960
1304305	1304305 Oprava tlač. HP P2015dn
1305034	1305034 Oprava tlač.WN 4915xe
1305169	1305169 Oprava tlač.WN 4915xe
1305170	1305170 Oprava tlač. Epson FX 890
1305174	1305174 Oprava tlač. Epson FX 890
1305175	1305175 Oprava tlač. Epson FX 890
1305127	1305127 ND batéria UPS ES 700
1305270	1305270 ND OMNIKEY 3121
1305172	1305172 ND monitor
1305320	1305320 ND RAM
1305340	1305340 ND patch kábel
1305288	1305288 ND HDD
1305411	1305411 ND batéria do skenera MC 9094
1305419	1305419 ND monitor
1305326	1305326 ND monitor
1305426	1305426 ND klávesnice
1305128	1305128 ND batéria UPS ES 700
1304982	1304982 ND HDD
1305321	1305321 ND kábel HDM
1305339	1305339 ND patch kábel
1305427	1305427 ND myši
1305428	1305428 ND reproduktory
1305189	1305189 ND batéria do skenera
1305176	1305176 ND monitor
1305596	1305596 ND pamäť RAM
1305596	1305596 ND pamäť SD
1305596	1305596 ND token
1304160	1304160 Oprava snímača Motorola MC9094
1304760	1304760 Oprava tlačiarne WN HPR 4915xe
1304956	1304956 Oprava tlačiarne WN HPR 4915xe
1305421	1305421 Oprava tlačiarne HP LJ 1320n
1304171	1304171 ND stand STND 08R00 000 4
1305041	1305041 ND Epson FX890 ribbon drive
1305263	1305263 ND batéria HR1234W
1305269	1305269 ND kit print head & cable 4915xe
1305276	1305276 ND batéria Motorola MC75A6
1305498	1305498 ND OMNIKEY 3121
1305838	1305838 ND C9F26AA HP P201
1306165	1306165 profylakt.zar.ITSMDBS1,ITSMDBS2,LOGISSMS
1304891	1304891 Oprava tlač. HP 4200
1305009	1305009 Oprava snímača MC9094
1305149	1305149 Oprava tlač.WN 4915xe
1305282	1305282 Oprava snímača MS 9520
1305365	1305365 Oprava tlač.Epson FX 890
1305369	1305369 Oprava tlač.WN 4915xe
1305371	1305371 Oprava tlač.WN 4915xe
1305438	1305438 ND batéria UPS ES 700
1305483	1305483 ND batéria UPS ES 700
1305641	1305641 ND monitor
1305738	1305738 ND batéria UPS ES 700
1305621	1305621 ND UTP kábel lanko
1305753	1305753 ND RAM
1305779	1305779 ND zdroj
1305856	1305856 ND HDD
1305891	1305891 ND RAM
1305749	1305749 ND Myši

1305752	1305752 ND kábel UTP cat5e
1305871	1305871 ND Myši
1305872	1305872 ND batéria UPS ES 700
1305883	1305883 ND hlava do tlačiarne
1305907	1305907 ND batéria do notebooku
1305889	1305889 ND RAM
1305429	1305429 ND FAN+klávesnica
1305803	1305803 ND HDD
1306088	1306088 ND batéria UPS ES 700
1305948	1305948 ND monitor
1306155	1306155 ND batéria do snímača MC75A
1306156	1306156 ND batéria do snímača MC75A
1306120	1306120 ND Myši
1305505	1305505 Oprava tlač.WN 4915xe
1305622	1305622 Oprava tlač.WN 4915xe
1305727	1305727 Oprava tlač.WN 4915xe
1305736	1305736 Oprava tlač.Epson FX 890
1305442	1305442 Oprava tlač.HP LJ 1300
1305425	1305425 Oprava tlač. HP LJ 1320n
1305875	1305875 Oprava tlač.Epson FX 890
1305637	1305637 Oprava tlač.Epson FX 890
1305639	1305639 Oprava tlač.Epson FX 890
1305874	1305874 Oprava tlač.WN 4915xe
1305876	1305876 Oprava tlač.Epson FX 890
1305878	1305878 Oprava tlač.Epson FX 890
1305758	1305758 Oprava tlač.Epson FX 890
1305092	1305092 Oprava snímača MC 9094
1306133	1306133 Oprava tlač.HP 1320n
1306113	1306113 Oprava tlač.HP 1320n
1306600	1306600 Manhattan kábel,USB 2.0A/Apredlž.3m,stri
1306600	1306600 500GB HDD3,5" 7200RPM Serial ATAIN.16MB
1306600	1306600 ADATA SSD128GB XPG SX900 2,5"SATAIII6Gb
1306600	1306600 AXAGO USB2.0 SATA/IDE adapt.vrataneAC
1306600	1306600 AXAGO SATA IDE Bi Direct. adaptér int.
1306601	1306601 Kábel S ATA 600 050 90° down CLIP 0.50m,
1306601	1306601 Kábel S ATA 600 050 CLIP 0.50m,Wentronic
1306601	1306601 Sieťový kábel 220V k PC, 3m
1306601	1306601 Kábel sieťový 5m VDE 220/ 230V napájaci
1306601	1306601 Kábel sieťový, predlž., 3m VDE220/230V
1306072	1306072 Predlžovačka 220V, 5m + 5 zásuviek
1306072	1306072 Predlž. prívod 230V,3m,5 zásuviek+vypína
1306072	1306072 Batérie GP CR2032 5ks
1306072	1306072 Batérie GP CR2016 5ks
1306072	1306072 Mastech MS 6812 vyhľadávač na telek.kábl
1306072	1306072 ADATA SSD256GB XPG SX9002,5"SATAIII6Gb/
1306072	1306072 Samsung adapt.ET R205 microUSB(M) USB(F)
1306072	1306072 PremiumCord HDMI High Speed káb.verz.1.4
1306072	1306072 SSD 2,5"120GB Samsung 840EVO SATAIII Des
1306072	1306072 DATACOM UTP flex,Cat.5ePVC,šedý,100m,lic
1306072	1306072 Microsoft Optical Mouse 200 JUD 00008
1306072	1306072 Microsoft Wired Keyboard 200 USB black
1305055	1305055 Oprava tlačiarne Epson FX 890
1305484	1305484 Oprava tlačiarne Epson FX890
1305627	1305627 Oprava tlačiarne HP LJ 1300
1305830	1305830 Oprava tlačiarne WN HPR 4915xe
1305942	1305942 Oprava tlačiarne HP LJ P2015dn
1306043	1306043 Oprava tlačiarne HP LJ 1300
1305798	1305798 ND batéria HR1234W
1306158	1306158 ND C9F26AA HP P201

1306182	1306182 ND C9F26AA HP P201
1306190	1306190 ND RAM 1GB 667MHz DDR2
1305750	1305750 ND klávesnice
1305751	1305751 ND Patch kábel
1305873	1305873 ND monitor
1305886	1305886 ND HDD
1306263	1306263 ND batéria do UPS
1306286	1306286 ND čít.čip.kariet
1305188	1305188 ND batéria do snímača Symbol
1306114	1306114 ND pasta na procesor
1305298	1305298 oprava tl. WN HighPrint 4915xe
1305585	1305585 ND monitor k PC
1305642	1305642 ND monitor k PC
1305643	1305643 ND kable
1305819	1305819 oprava tl. WN HighPrint 4915xe
1305820	1305820 oprava tlač. EPSON 890
1306046	1306046 oprava tlač. HP 3052
1306162	1306162 ND baterie do UPS BE 700
1306259	1306259 ND monitor k PC
1305497	1305497 oprava tl. WN HighPrint 4915xe
1305499	1305499 oprava Metrologic MS9520
1305630	1305630 oprava Metrologic MS9520
1305644	1305644 oprava PC HP7600
1305728	1305728 oprava monitora k PC
1305735	1305735 oprava notebook HP Compaq6710b
1305800	1305800 oprava OMNIKEY 3121 čítačka
1305825	1305825 oprava čítačky Omnikey 3121
1305831	1305831 ND mouse pre PC
1305915	1305915 ND konektory
1305939	1305939 ND switch
1306050	1306050 ND pre tlač. HP 2015
1306071	1306071 ND pre tlač. Epson FX890
1306055	1306055 oprava tlač. HP LJ2055
1306122	1306122 oprava čítačky Omnikey 3121
1306123	1306123 ND pre čítačky omnikey
1306193	1306193 oprava skenera HP4600
1306194	1306194 oprava PC HP Compaq7600
1306268	1306268 oprava čítačky Omnikey 3121
1306412	1306412 Oprava tlačiarne Printronix L7
1306274	1306274 ND RAM
1306346	1306346 ND HDD+RAM
1306337	1306337 ND Myš
1306347	1306347 ND zdroj k docking station
1306125	1306125 ND batéria do notebooku
1306445	1306445 ND čítačka čip.kariet
1306471	1306471 ND čítačka čip.kariet
1306345	1306345 ND RAM
1306456	1306456 ND monitor
1305961	1305961 Oprava PC HP Compaq dc 8000
1305424	1305424 Oprava snímača čiar.kódu MS 952
1306255	1306255 Oprava tlač.Epson FX 890
1306348	1306348 Oprava tlač.WN 4915xe
1306166	1306166 Oprava tlač. HP LJ 2600n
1306326	1306326 Oprava tlač.WN 4915xe
1306336	1306336 Oprava tlač. WN 4915xe
1306339	1306339 Oprava projektoru Epson H434B
1306554	1306554 Oprava tlač. Epson FX 890
1306560	1306560 Oprava tlač. HP LJ 1320n
1306561	1306561 Oprava tlač. HP LJ 1320n

1306602	1306602 Oprava tlač.WN 4915xe
1306582	1306582 ND batéria UPS ES 700
1306519	1306519 ND batéria UPS ES 700
1306588	1306588 ND batéria do NTB
1306612	1306612 ND čít.čip.kariet
1306613	1306613 ND HDD
1306466	1306466 ND HDD, RAM
1306321	1306321 ND MB, HDD
1306265	1306265 ND Motorola USB Cable Serie 2,1
1306720	1306720 ND TRACTOR ASSY
1306343	1306343 ND RAM
1306352	1306352 ND batéria UPS ES 700
1306458	1306458 ND ľavá a pravá časť traktora
1306459	1306459 ND ľavá a pravá časť traktora
1306529	1306529 ND HDD
1306537	1306537 ND monitor
1306550	1306550 ND zdroj k NTB
1306552	1306552 ND základná doska
1306553	1306553 ND mys
1306555	1306555 ND hlava do tlačiarne
1306556	1306556 ND hlava do tlačiarne
1306558	1306558 ND čítačka čip.kariet
1306468	1306468 Oprava tlač. HP LJ 1320n
1306443	1306443 Oprava tlač.WN 4915xe
1306526	1306526 Oprava PC HP dc 7800
1306708	1306708 Oprava PC no name
1306437	1306437 ND tractor assy
1306536	1306536 ND motherboard, HDD
1306845	1306845 ND myš
1306856	1306856 ND HDD, RAM
1306861	1306861 ND batéria do Motoroly MC9094
1306322	1306322 ND predlž.káble pre UPS
1306776	1306776 ND monitor
1305211	1305211 ND pre tlač. Epson 890
1306512	1306512 ND pre tlač. HP 1320
1306521	1306521 oprava tlač. HP 1320
1306562	1306562 ND baterie pre HP Probook6560b
1306674	1306674 oprava monitora HP
1305155	1305155 Oprava tlačiarne WN HPR 4915xe
1306074	1306074 Oprava tlačiareň HP LJ 1522n
1306075	1306075 Oprava tlačiarne Epson FX890
1306189	1306189 Oprava tlačiarne Epson FX890
1306253	1306253 Oprava tlačiareň HP LJ 1300
1306338	1306338 Oprava tlačiarne Epson FX890
1306340	1306340 Oprava tlačiarne Epson FX890
1306356	1306356 Oprava tlačiarne WN HPR 4915xe
1306475	1306475 Oprava tlačiareň HP LJ 2015dn
1305804	1305804 ND WD5000LPVT WD Scorpio Blue
1305807	1305807 ND stahovacie pasky 10cm
1306181	1306181 ND PAPER EJECT ASSY EpsonFX890
1306313	1306313 ND PAPER GUIDE ASSY Epson FX890
1306363	1306363 ND batéria HR1234W
1306364	1306364 ND batéria HR1234W
1306396	1306396 ND C9F26AA HP P201
1306397	1306397 ND C9F26AA HP P201
1306447	1306447 ND KVR800D2N6/1G Kingston DDR2
1306652	1306652 ND batéria Motorola MC9094
1306703	1306703 ND kit print head nad cable 4915
1306790	1306790 ND bateria 628668 001 6cell

1306663	1306663 Oprava UPS HP R3000
1306874	1306874 Oprava tlač. MT 5023
1306844	1306844 Oprava tlač. HP LJ 1320n
1307026	1307026 Oprava tlač. Epson FX 890
1307027	1307027 Oprava tlač. Epson FX 890
1307028	1307028 ND hlava do tlačiarne
1307030	1307030 ND batéria do NB
1307034	1307034 ND dockin station
1307024	1307024 ND optické myši
1307130	1307130 ND batéria do UPS APC ES 700
1306916	1306916 ND čítačka čip.kariet OMNIKEY
1307135	1307135 ND batéria do UPS APC ES 700
1305040	1305040 Oprava tlačiarne Epson FX890
1305935	1305935 Oprava tlačiarne Epson FX890
1306450	1306450 Oprava tlačiarne WN4915xe
1306669	1306669 Oprava tlačiarne Epson FX890
1306314	1306314 ND HOUSING ASSY.,PANEL FX890
1306706	1306706 ND Epson FRAME,TR,RIGHT,EPAG
1306818	1306818 ND WD2500AAKX 7200 SATA
1306836	1306836 ND set of head cableHPR4915xe
1307041	1307041 ND batéria HR1234W
1307060	1307060 ND batéria HR1234W
1307185	1307185 OPC Drum Kit L7032
1307185	1307185 Developer Unit L7032
1307185	1307185 Developer Mix L7032
1307185	1307185 Fuser Kit (Fuser Unit +ExitRoller)L7032
1307186	1307186 Opticky valec PC cartridge PP4050 S/PC51
1307186	1307186 Developer kit PP 4050
1307186	1307186 Fuser Kit PP 4050 S/FK54
1307186	1307186 T ransfer charger 4050
1307186	1307186 Main charger 4050
1306335	1306335 oprava tl. WincorHighprint4915
1306401	1306401 oprava tlač. HP 1300
1306435	1306435 oprava tlač. Tally T5023+
1306511	1306511 ND pre tlač. HP 2015
1306590	1306590 oprava tl. WincorHighprint4915
1306649	1306649 oprava tl. WincorHighprint4915
1306675	1306675 ND pre tlač. Epson 890
1306858	1306858 oprava tlač. Epson 890
1306859	1306859 ND mouse
1306862	1306862 ND pre skenery Motorola MC75
1306888	1306888 oprava UPSR/T2200
1306902	1306902 ND baterie pre UPS ES700
1307022	1307022 oprava OMNIKEY 3121
1307047	1307047 oprava tlač. Epson 890
1307096	1307096 oprava OMNIKEY 3121
1306899	1306899 ND USB kábel 3m
1306919	1306919 ND RAM
1306918	1306918 ND RAM,HDD
1306934	1306934 ND myš
1306935	1306935 ND myš
1306936	1306936 ND myš
1307160	1307160 ND batéria do UPS APC ES 700
1307032	1307032 ND zdroj do NB
1307029	1307029 Oprava tlač.WN 4915xe
1307090	1307090 Oprava tlač.WN 4915xe
1306846	1306846 Oprava UPS APC RMI 1400
1306847	1306847 Oprava UPS APC 1000 I Net
1307129	1307129 Oprava tlač.WN 4915xe

1306787	1306787 Oprava snímača MS 1690
1307133	1307133 ND MB,HDD,RAM
1307167	1307167 ND monitor
1307178	1307178 ND klávesnica
1307170	1307170 ND optické myši
1307224	1307224 ND RAM
1307225	1307225 ND monitor
1307109	1307109 Oprava tlač. HP LJ 2605N
1307095	1307095 Oprava tlač. WN 4815xe
1305842	1305842 Oprava skenera Ricoh I760D
1305847	1305847 Oprava skenera Ricoh IS300e
1306709	1306709 Oprava tlačiarne HP LJ P2055dn
1307098	1307098 Oprava tlačiarne Epson FX890
1307214	1307214 Oprava tlačiarne HP LJ 3700dn
1305253	1305253 ND Honeywell Xenon 1900 USB
1307039	1307039 ND Battery Symbol LI ION 2200m
1307040	1307040 ND Housing shell + head cable
1307173	1307173 ND C9F26AA HP P201
1307273	1307273 ND batéria UPS ES 700
1307298	1307298 ND optické myši
1307299	1307299 ND klávesnice
1307275	1307275 ND RAM+MB
1307387	1307387 ND čít.čip.kariet OMNIKEY 3121
1306756	1306756 oprava tlač. HP 2015
1307035	1307035 ND pre tlač. Epson 890
1307126	1307126 oprava tl. WincorHighprint4915
1307127	1307127 oprava tl. WincorHighprint4915
1307128	1307128 oprava tl. WincorHighprint4915
1307156	1307156 oprava OMNIKEY 3121
1307232	1307232 oprava OMNIKEY 3121
1307268	1307268 ND pre OMNIKEY 3121
1307340	1307340 oprava OMNIKEY 3121
1307246	1307246 Oprava tlač.TALLY 5023+
1307252	1307252 Oprava UPS UNISYS 1000
1307254	1307254 Oprava zálož.zdrojaGE Lan 10kVA
1307253	1307253 Oprava tlač. HP LJ 1320n
1307164	1307164 Oprava tlač. HP LJ 2600N
1306793	1306793 Oprava snímača MS 9520
1307175	1307175 ND pre tlač. Epson 890
1307261	1307261 ND optovalec pre tlač PSi4050XP
1400038	1400038 ND pre tl.Wincor Highprint4915
1400147	1400147 ND Omnikey 3121
1306903	1306903 oprava tlač. Epson 890
1307280	1307280 oprava tlač. HP 2015
1307341	1307341 oprava sním. Metrologic MS9520
1307459	1307459 oprava tl. WincorHighprint4915
1307480	1307480 oprava tl. WincorHighprint4915
1400010	1400010 oprava tl. WincorHighprint4915
1400043	1400043 oprava sním. Metrologic MS9520
1400143	1400143 oprava sním. Metrologic MS9520
1400205	1400205 oprava PC HP 7600
1400276	1400276 oprava čítačky Omnikey3121
1400277	1400277 oprava monitora HP
1307295	1307295 ND monitor
1307249	1307249 ND UPS ES 700VA
1400012	1400012 ND batéria do UPS ES 700
1400013	1400013 ND batéria do UPS ES 700
1400168	1400168 ND optická myš
1400199	1400199 ND monitor

1400200	1400200 ND RAM
1400203	1400203 ND čít.čip.kariet OMNIKEY 3121
1400312	1400312 ND čít.čip.kariet OMNIKEY 3121
1306877	1306877 Oprava tlač. Epson FX 890
1307315	1307315 Oprava tlač. HP LJ 1320n
1307345	1307345 Oprava tlač. HP LJ 2015dn
1307288	1307288 Oprava tlač.WN 4915xe
1307481	1307481 Oprava UPS HP R 1500G2
1400112	1400112 Oprava tlač.WN 4915xe
1400118	1400118 Oprava tlač.WN 4915xe
1400316	1400316 Oprava tlač.HP LJ 3055
1400301	1400301 Oprava tlač.Epson FX 890
1307071	1307071 Oprava tlačiarne Epson FX890
1307099	1307099 Oprava tlačiarne HP LJ 1522n
1307159	1307159 Oprava tlačiarne Epson FX890
1307180	1307180 Oprava tlačiarne Epson FX890
1307181	1307181 Oprava tlačiarne Epson FX890
1307183	1307183 Oprava tlačiarne MT 5023
1307229	1307229 Oprava tlačiarne Epson FX890
1400111	1400111 Oprava tlačiarne HP LJ 1320
1400174	1400174 Oprava tlačiarne HP LJ 1320n
1307283	1307283 ND C9F26AA HP P201
1400018	1400018 ND kábel ku tlač.hlave WN4915xe
1400019	1400019 ND zákl.doska na WN HPR4915xe
1400037	1400037 ND C9F26AA HP P201
1400110	1400110 ND kábel ku hlave WN HPR4915xe
1400138	1400138 ND C9F26AA HP P201
1400142	1400142 ND C9F26AA HP P201
1400191	1400191 ND tlačová hlava WN HPR4915xe
1400268	1400268 ND prítlačná lišta WN HPR4915x
1305626	1305626 Oprava snímača Motorola MC9094
1400331	1400331 ND baterry charget
1400331	1400331 ND cassy
1400331	1400331 ND power supply
1307294	1307294 Oprava snímača MS 1690
1307046	1307046 ND myš optická
1307296	1307296 ND RAM
1307297	1307297 ND zdroj do PC
1307300	1307300 ND RAM
1307447	1307447 ND batéria do UPS ES 700
1307074	1307074 Oprava snímača Motorola MC 9094
1400202	1400202 Oprava tlač.WN 4915xe
1400176	1400176 Oprava tlač.WN 4915xe
1400307	1400307 Oprava tlač. HP LJ P2015dn
1400297	1400297 Oprava tlač. HP LJ 2055
1400298	1400298 Oprava tlač. HP LJ 2340
1400384	1400384 Oprava tlač. PSI 4050XP
1307482	1307482 ND batéria do UPS APC 1000
1400099	1400099 ND batéria do UPS ES 700
1400119	1400119 ND batéria do UPS ES 700
1400263	1400263 ND batéria do UPS APC 1000
1400265	1400265 ND batéria do UPS APC 1000
1400305	1400305 ND batéria do UPS APC 1000
1400341	1400341 ND batéria do UPS ES 700
1400342	1400342 ND batéria do UPS ES 700
1400344	1400344 ND tlač.hlava
1400347	1400347 ND HDD
1400358	1400358 ND HDD
1400382	1400382 ND optické myši

1400420	1400420 ND 16 portový switch
1400421	1400421 ND 16 portový switch
1400480	1400480 ND tlač.hlava
1400478	1400478 ND batéria do UPS ES 700
1306897	1306897 Oprava snímača Xenon 1900GSR
1400278	1400278 Oprava tlač. HP LJ 1320n
1400279	1400279 Oprava tlač.WN 4915xe
1400166	1400166 oprava notebook HP 6120
1400187	1400187 oprava tlač. Epson 890
1400352	1400352 oprava notebook HPProbook6560b
1400353	1400353 oprava sním. Metrologic MS9520
1400365	1400365 oprava sním. Metrologic MS9520
1400378	1400378 oprava sním. Metrologic MS9520
1400392	1400392 ND Omnikey 3121
1400411	1400411 oprava monitora HP 1710
1400412	1400412 ND myš USB
1400413	1400413 ND switch 8 port
1400414	1400414 ND pre Epson 890
1400482	1400482 oprava notebook HPProbook6560b
1400501	1400501 oprava sním. Metrologic MS9520
1400528	1400528 ND pre notebook HP6710b
1307313	1307313 Oprava tlač.Epson FX 890
1400098	1400098 Oprava snímača MS 1690
1400108	1400108 Oprava tlač.Epson FX 890
1307490	1307490 Oprava tlač.Epson FX 890
1400300	1400300 Oprava tlač.WN 4915xe
1400535	1400535 Oprava tlač.WN 4915xe
1400473	1400473 Oprava UPS APS ASPC 1000 I Net
1400558	1400558 Oprava tlač. HP LJ 1320n
1307256	1307256 ND HDD
1400162	1400162 ND HDD, RAM
1400306	1400306 ND batéria do UPS 1500
1400204	1400204 ND dokovacia stanica
1400485	1400485 ND batéria do snímača MC75A
1400472	1400472 ND zdroj do NB
1400536	1400536 ND klávesnica
1400497	1400497 ND HDD, klávesnica
1400498	1400498 ND monitor
1400608	1400608 ND HDD, RAM
1400522	1400522 ND monitor
1400523	1400523 ND RAM
1400686	1400686 ND RAM
1400695	1400695 ND monitor
1400723	1400723 ND monitor
1400674	1400674 ND RAM
1400675	1400675 ND klávesnica
1400502	1400502 ND HDD, RAM
1400676	1400676 ND myš
1400533	1400533 Oprava tlač. HP LJ 3015
1400537	1400537 Oprava PC HP Compaq 8000
1400302	1400302 Oprava snímača MC 9094
1400303	1400303 Oprava snímača MC 9094
1307097	1307097 Oprava tlačiarne Epson FX890
1400085	1400085 Oprava tlačiarne Epson FX890
1400086	1400086 Oprava tlačiarne Epson FX890
1400140	1400140 Oprava tlačiarne Epson FX890
1400141	1400141 Oprava tlačiarne Epson FX890
1400217	1400217 Oprava tlačiarne Epson FX890
1400428	1400428 Oprava tlačiarne HP LJ 1320n



1400639	1400639 Oprava tlačiarne Tally T5023+
1400084	1400084 ND Epson FX 890 panel
1400313	1400313 ND batéria HR1234W
1400390	1400390 ND set of head cableHPR4915xe
1400422	1400422 ND Epson FX 890 panel
1400562	1400562 ND ED495AA HP 90W AC Adapter
1400567	1400567 ND ED494AA HP 65W AC Adapter
1400568	1400568 ND batéria HR1234W
1400595	1400595 ND Epson FX 890 panel
1400600	1400600 ND C9F26AA HP P201 20"LED
1400668	1400668 ND Dig.bateria,Lithium,IECCR2032
1400258	1400258 oprava tl. WincorHighprint4915
1400259	1400259 oprava tlač. HP LaserJet 1300
1400642	1400642 oprava tlač. HP LaserJet 1200
1400643	1400643 ND baterie CR2032
1400644	1400644 ND baterie pre APC 700AV
1400698	1400698 oprava PC monitor HP L1706
1400873	1400873 Oprava tlač.WN 4915xe
1400876	1400876 Oprava tlač.Epson FX 890
1400877	1400877 Oprava tlač.WN 4915xe
1400920	1400920 Oprava tlač.HP LJ 2055
1400870	1400870 Oprava tlač.HP LJ 2055
1400798	1400798 Oprava tlač. HP 1200
1400924	1400924 Oprava tlač. HP 1300
1401015	1401015 Oprava tlač. HP LJ 1320n
1400474	1400474 Oprava tlač.Epson FX 890
1400475	1400475 Oprava tlač.Epson FX 890
1400673	1400673 Oprava tlač.HP LJ 1320n
1400678	1400678 Oprava tlač.MT 5023
1400680	1400680 Oprava tlač.WN 4915xe
1400696	1400696 Oprava tlač.Epson FX 890
1400697	1400697 Oprava tlač.Epson FX 890
1400336	1400336 Oprava tlač.Epson FX 890
1400733	1400733 Oprava tlač.WN 4915xe
1400892	1400892 Oprava tlač.Tally 5023+
1400701	1400701 Oprava tlač.WN 4915xe
1400340	1400340 Oprava tlač.Epson FX 890
1400349	1400349 Oprava tlač.WN 4915xe
1400308	1400308 Oprava tlač.HP LJ P2015dn
1400488	1400488 Oprava skenera Motorola MC 9094
1400722	1400722 ND batéria do UPS ES 700
1400754	1400754 ND batéria 3V
1400757	1400757 ND čít.čip.kariet OMNIKEY 3121
1400782	1400782 ND batéria do UPS APC ES 700
1400838	1400838 ND batéria do UPS APC ES 700
1400871	1400871 ND HDD
1400843	1400843 ND optické myši
1400842	1400842 ND klávesnice
1400895	1400895 ND optické myši
1400872	1400872 ND monitor
1400964	1400964 ND pre APC 1000 SMART
1400958	1400958 ND HDD+RAM
1400959	1400959 ND HDD + RAM
1400960	1400960 ND monitor
1400991	1400991 ND batéria do UPS ES 700
1401096	1401096 ND switch
1401097	1401097 ND monitor
1401098	1401098 ND monitor
1401100	1401100 ND batéria do UPS ES 700

1401011	1401011 ND batéria do MC 75A
1401023	1401023 ND RAM
1401024	1401024 ND Printserver
1401123	1401123 ND vadný napájací zdroj
1401154	1401154 ND batéria do UPS ES 700
1401164	1401164 ND HDD
1401173	1401173 ND HDD
1401180	1401180 ND RAM
1401237	1401237 ND switch 8 portový
1401241	1401241 ND UTP kábel
1400934	1400934 ND HDD+RAM
1401165	1401165 ND monitor
1401207	1401207 ND mys
1401208	1401208 ND myš
1401209	1401209 ND myš
1401210	1401210 ND klávesnica
1401211	1401211 ND klávesnica
1401213	1401213 ND klávesnica
1401206	1401206 ND kábel Ymini USB
1400563	1400563 ND USB kábel
1400646	1400646 Oprava UPS 1000 SMART
1306905	1306905 CardOS V4.4 68kb smartcard
1400592	1400592 opr. tl. Wincor HighPrint 4915
1400650	1400650 opr. tl. Wincor HighPrint 4915
1400788	1400788 opr. tl. Wincor HighPrint 4915
1400899	1400899 opr. tl. Wincor HighPrint 4915
1400333	1400333 oprava tl. EPSON 890
1400354	1400354 oprava tl. EPSON 890
1400506	1400506 ND pre Motorola MC 9094
1400525	1400525 oprava HP Compaq 6730b
1400649	1400649 ND pre Motorola MC9094
1400700	1400700 ND baterie pre UPS
1400709	1400709 oprava tl. EPSON 890
1400710	1400710 oprava tlač HP LaserJet 1320DN
1401178	1401178 oprava PC čítačky čip. kariet
1401397	1401397 ND battery charger
1401397	1401397 ND batt 8c
1401397	1401397 ND cassy
1401408	1401408 ND battery charger
1401556	1401556 ND battery UPS
1306905	1306905 CardOS V4.4 68kb smartcard
1400373	1400373 Oprava tlačiarne Epson FX890
1400433	1400433 Oprava tlačiarne Zebra GX430t
1400551	1400551 Oprava tlačiarne Epson FX890
1400566	1400566 Oprava tlačiarne HP LJ2015dn
1400670	1400670 Oprava tlačiarne Epson FX890
1400759	1400759 Oprava tlačiarne Epson FX890
1400760	1400760 Oprava tlačiarne Epson FX890
1400791	1400791 Oprava tlačiarne HP LJ1320
1401141	1401141 Oprava tlačiarne WN HPR 4915xe
1400569	1400569 ND DDR2 1GB 800MHz Non ECC DIMM
1400859	1400859 ND Epson FX890 ribbon mask
1400879	1400879 ND WD5000LPVT WDScorpioBlue2,5
1400970	1400970 ND batéria CR2032, 3V
1400984	1400984 ND print head 4915xe
1401121	1401121 ND batéria HR1234W
1306905	1306905 CardOS V4.4 68kb smartcard
1400669	1400669 Oprava snímača Motorola MC9094
1400990	1400990 ND PAPER GUIDE ASSY EpsonFX890

1401345	1401345 ND adaptér HP 0957 2292-230V/24V
1401562	1401562 ND C9F26AA HP P201
1401604	1401604 ND set of head cableHPR4915xe
1401610	1401610 ND batéria HR1234W
1401630	1401630 ND print head 4915xe
1401796	1401796 ND print head 4915xe
1400134	1400134 Oprava tlačiarnie Epson FX 890
1400965	1400965 Oprava tlačiarnie MT 5023+
1401103	1401103 Oprava MTZ HP LaserJet 3055
1401105	1401105 Oprava tlačiarnie Epson FX890
1401183	1401183 Oprava tlačiarnie HP LJ1320n
1401215	1401215 Oprava tlačiarnie HP LJ2015dn
1401221	1401221 Oprava tlačiarnie WN HPR 4915xe
1401256	1401256 Oprava tlačiarnie Epson FX890
1401359	1401359 Oprava tlačiarnie MT 5023+
1401362	1401362 Profylakt.PRINTRONICS PS A3p7220
1401363	1401363 Profylakt.PRINTRONICS PS A3p7220
1401439	1401439 Oprava tlačiarnie WN HPR 4915xe
1401561	1401561 Oprava tlačiarnie Epson FX890
1401596	1401596 Oprava tlačiarnie HP LJ 1320
1401707	1401707 Oprava tlačiarnie HP LJ 1100
1401708	1401708 Oprava tlačiarnie HP LJ 6L
1400165	1400165 oprava notebook HP nc6120
1400918	1400918 oprava tl. WincorHighprint4915
1400919	1400919 oprava tl. WincorHighprint4915
1401179	1401179 oprava PC HP Compaq dc7800
1401336	1401336 oprava sním. Metrologic MS9520
1401405	1401405 oprava tlač. Epson 890
1401406	1401406 oprava tl. WincorHighprint4915
1401412	1401412 oprava tlač. HP LJ 3800
1401426	1401426 oprava PC monitor HP 1940
1401636	1401636 oprava PC HP Compaq 8000
1401485	1401485 ND batéria do UPS ES 700
1401486	1401486 ND batéria do UPS ES 700
1401487	1401487 ND batéria do UPS ES 700
1401460	1401460 ND UTP kábel+ konektory RJ 45
1401564	1401564 zdroj do PC
1401501	1401501 ND HDD+RAM
1401581	1401581 ND HDD
1401567	1401567 ND HDD
1401568	1401568 ND HDD
1401502	1401502 ND skener symbol LS 2208
1401642	1401642 ND batéria do UPS ES 700
1401723	1401723 ND HDD+RAM
1401743	1401743 ND monitor
1400839	1400839 ND batéria do snímača MC75A
1401077	1401077 ND batéria do UPS ES 700
1401078	1401078 ND batéria do UPS ES 700
1401202	1401202 ND akumulátory do skenerov MS95
1401252	1401252 ND cin+ kalafónia
1401250	1401250 ND monitor
1401106	1401106 ND nabíj. na snímače Motorola
1401370	1401370 ND batéria do UPS ES 700
1401368	1401368 ND optické myši
1401372	1401372 ND optické myši
1401373	1401373 ND klávesnica
1401417	1401417 ND batérie do MC 90000
1401420	1401420 ND monitor
1401457	1401457 ND batéria do UPS ES 700

1401484	1401484 ND switch
1401149	1401149 ND pre scanner Motorola MC75A6
1401184	1401184 ND dokstanica Motorola MC75A6
1401371	1401371 ND AC Alpine 11 Pro Rev.2
1401389	1401389 ND Wincor print head 4915xe
1401443	1401443 ND zdroj Fortron FSP460 60HCN
1401476	1401476 ND bateria Motorola
1401728	1401728 ND Wincor print head 4915xe
1401752	1401752 ND zdroj Eurocase P4 400W
1400554	1400554 Oprava tlač.Epson FX 890
1400874	1400874 Oprava tlač.Epson FX 890
1400410	1400410 Oprava skenera Motorola MC 9094
1401094	1401094 Oprava tlač.Epson FX 890
1401367	1401367 Oprava tlač.WN 4915xe
1401541	1401541 Oprava tlač. HP LJ 3015
1401565	1401565 Oprava tlač.Tally 5023+
1401466	1401466 Oprava tlač. HP LJ P2015dn
1401503	1401503 Oprava skenera symbol LS 2208
1401633	1401633 Oprava tlač. WN 4915xe
1401475	1401475 Oprava tlač. HP LJ 1320
1401493	1401493 Oprava tlač. WN 4915xe
1401108	1401108 Oprava tlač.TALLY 5023+
1401148	1401148 Oprava tlač. HP LJ 3055
1401176	1401176 Oprava tlač. WN 4915xe
1401236	1401236 Oprava tlač. Epson FX 890
1401354	1401354 Oprava tlač.WN 4915xe
1401382	1401382 Oprava tlač.WN 4915xe
1401438	1401438 Oprava tlač.WN 4915xe
1401379	1401379 Oprava tlač. HP LJ P3005x
1401488	1401488 Oprava tlač. WN 4915xe
1401664	1401664 ND RAM
1401665	1401665 ND monitor
1401666	1401666 ND batéria do notebooku
1401775	1401775 ND batéria do UPS APC 1000
1401785	1401785 ND monitor
1401782	1401782 ND batéria do UPS ES 700
1401776	1401776 ND monitor
1401784	1401784 ND switch
1401812	1401812 ND HDD
1401871	1401871 ND monitor
1401864	1401864 ND optické myši
1401917	1401917 ND batéria do UPS ES 700
1401575	1401575 Oprava tlač. Epson FX 890
1401768	1401768 Oprava tlač. HP LJ 1320
1401769	1401769 Oprava tlač. HP LJ 2055dn
1401612	1401612 Oprava UPS APC 1000RMI
1401797	1401797 Oprava tlač. Epson FX 890
1400967	1400967 ND kabel, USB 2.0,
1401711	1401711 ND batéria HR1234W
1401713	1401713 ND batéria HR1234W
1401783	1401783 ND batéria HR1234W
1401951	1401951 ND batéria HR1234W
1401952	1401952 ND prítláčná lišta WN HPR4915xe
1401954	1401954 ND batéria HR1234W
1402015	1402015 ND tlačová hlava WN HPR4915xe
1400549	1400549 Oprava snímača Motorola MC9094
1400550	1400550 Oprava snímača Motorola MC9094
1401205	1401205 Oprava snímača MS 1690
1401222	1401222 Oprava zál.zdroja GE Lan 10kVA

1401489	1401489 Oprava tlač.Epson FX 890F
1401458	1401458 Oprava tlač.Epson FX 890
1401634	1401634 Oprava tlač.Epson FX 890
1401799	1401799 Oprava tlač.Epson FX 890
1401976	1401976 Oprava tlač.Epson FX 890
1402231	1402231 ND batéria do skenera MC9094
1402296	1402296 ND monitor
1402281	1402281 ND batéria do UPS ES 700
1402268	1402268 ND monitor
1402270	1402270 ND monitor
1402273	1402273 ND HDD
1402354	1402354 ND batéria do UPS ES 700
1402370	1402370 ND HDD
1402371	1402371 ND adaptér k NTB 6730b
1402374	1402374 ND batéria do UPS ES 700
1402400	1402400 ND patch káble
1402443	1402443 ND batéria do UPS ES 700
1401940	1401940 ND Fuser kit PP4050
1401657	1401657 ND RAM
1401760	1401760 ND optická myš
1401761	1401761 ND optická myš
1401762	1401762 ND optická myš
1401763	1401763 ND optická myš
1401814	1401814 ND RAM
1401803	1401803 ND displej do NTB
1402103	1402103 ND switch
1402105	1402105 ND switch
1402106	1402106 ND RAM
1402133	1402133 ND batéria do UPS ES 700
1402160	1402160 ND HDD
1402162	1402162 ND HDD
1402163	1402163 ND RAM
1401977	1401977 Oprava tlač.Epson FX 890
1401979	1401979 Oprava tlač.Epson FX 890
1402036	1402036 Oprava tlač. WN 4915xe
1402101	1402101 Oprava tlač. Epson FX 890
1402102	1402102 Oprava tlač. HP LJ 1522
1402173	1402173 Oprava tlač.Epson FX 890
1307025	1307025 Oprava tlač. Epson FX 890
1401521	1401521 oprava tl. WincorHighprint4915
1401522	1401522 oprava tl. WincorHighprint4915
1401616	1401616 oprava tlač. Epson 890
1401786	1401786 oprava tl. WincorHighprint4915
1401790	1401790 oprava tl. WincorHighprint4915
1401792	1401792 ND OMNIKEY 3121 4ks
1401855	1401855 ND baterie CR2032
1401974	1401974 oprava PC monitor
1402001	1402001 ND bateria
1402129	1402129 oprava tlač. Epson 890
1402152	1402152 ND pre Wincor 4915xe
1402224	1402224 oprava Metrologic MS9520 3ks
1402227	1402227 oprava PC HP7800
1402278	1402278 oprava scanera HP G4010
1402332	1402332 oprava Metrologic MS9520
1402339	1402339 oprava PC monitor
1402421	1402421 oprava PC monitor
1402155	1402155 Oprava tlač.WN 4915xe
1402318	1402318 Oprava tlač.Epson FX 890
1402334	1402334 Oprava tlač.WN 4915xe

1402236	1402236 Oprava tlač.WN 4915xe
1402288	1402288 ND HDD
1402346	1402346 ND klávesnice
1402372	1402372 ND batéria do NTB
1402373	1402373 ND adaptér do NTB
1402390	1402390 ND ovládací panel na FX 890
1402561	1402561 ND čítačka OMNIKEY 3121
1402565	1402565 ND monitor
1402567	1402567 ND HDD, RAM
1402635	1402635 ND myši
1401597	1401597 Oprava snímača Motorola MC9094
1401423	1401423 ND Honeywell Xenon 1900 USB
1401929	1401929 ND Honeywell Xenon 1900 USB
1402068	1402068 ND Honeywell Xenon 1900 USB
1401214	1401214 Oprava tlačiarne HP LJ2015dn
1401360	1401360 Oprava HEFTER SYST. M 3010
1401592	1401592 Oprava tlačiarne HP LJ1320
1401613	1401613 Oprava tlačiarne HP LJ2015dn
1401706	1401706 Oprava tlačiarne HP LJ 1300
1401847	1401847 Oprava tlačiarne HP P2015dn
1401851	1401851 Oprava tlačiarne HP LJ P2055dn
1401965	1401965 Oprava tlačiarne HP LJ 3505DN
1401985	1401985 Oprava tlačiarne Epson FX 890
1402030	1402030 Oprava tlačiarne Epson FX 890
1402065	1402065 Oprava tlačiarne WN HPR 4915xe
1402317	1402317 Oprava tlačiarne HP LJ1320
1400989	1400989 ND 2004004 DETECTOR FX 890
1401407	1401407 ND fuser unit for HP LJ1300
1401834	1401834 ND SPUR GEAR 20 Epson FX890
1401872	1401872 ND PROHP1514 MicroConnect P&D
1401924	1401924 ND batéria HR1234W
1401925	1401925 ND batéria HR1234W
1401933	1401933 ND batéria HR1234W
1402006	1402006 ND HP Battery 6 Cell Li Ion
1402020	1402020 ND TRACTOR ASSY+Frame Epson
1402048	1402048 ND batéria HR1234W
1402058	1402058 ND batéria CR2032, 3V, pack of 5
1402107	1402107 ND 536884 001 SPS
1402136	1402136 ND OMNIKEY 3121
1402411	1402411 ND Toshiba HDD 500GB 7200rpm,
1402423	1402423 ND tlačová hlava WN4915xe
1402425	1402425 ND tlačová hlava WN4915xe
1402431	1402431 ND Honeywell Xenon 1900 USB
1402457	1402457 ND batéria HR1234W
1402591	1402591 ND set of head cable WN4915xe
1402153	1402153 ND pre tlač. Epson 890
1402277	1402277 oprava tlač. Tally 5023+
1402377	1402377 oprava PC monitor
1402403	1402403 ND káble
1402404	1402404 ND Patch káble
1402420	1402420 oprava čítačky OMNIKEY
1402473	1402473 ND OMNIKEY 4
1402589	1402589 oprava PC monitor
1402599	1402599 oprava PC monitor
1402810	1402810 ND monitor
1402816	1402816 ND monitor
1402822	1402822 ND monitor
1402817	1402817 ND HDD, DVD
1402839	1402839 ND HDD, RAM

1402849	1402849 ND HDD
1402850	1402850 ND RAM
1402975	1402975 ND batéria do UPS ES 700
1402464	1402464 ND na Espon FX 890
1402581	1402581 ND batéria do UPS ES 700
1402646	1402646 ND batéria do NTB
1402647	1402647 ND RAM
1402649	1402649 ND RAM
1402738	1402738 ND napájací adaptér, RAM
1402688	1402688 ND batéria do UPS ES 700
1402723	1402723 ND monitor
1402734	1402734 ND monitor
1402736	1402736 ND monitor
1402754	1402754 ND batéria do UPS ES 700
1402786	1402786 ND HDD
1401793	1401793 Oprava tlač.WN 4915xe
1402143	1402143 Oprava tlač.WN 4915xe
1402364	1402364 Oprava tlač.WN 4915xe
1402367	1402367 Oprava tlač.Epson FX 890
1402369	1402369 Oprava tlač.Epson FX 890
1402506	1402506 Oprava tlač. Tally T 5023+
1402582	1402582 Oprava tlač.WN 4915xe
1402620	1402620 Oprava tlač.Epson FX 890
1402648	1402648 Oprava tlač.HP LJ 2600
1402566	1402566 Oprava tlač.HP LJ 1320n
1402621	1402621 Oprava tlač.WN 4915xe
1402752	1402752 Oprava tlač.WN 4915xe
1402785	1402785 Oprava tlač.Epson FX 890
1402691	1402691 Oprava tlač.WN 4915xe
1402230	1402230 oprava tl. WN Highprint 4915xe
1402396	1402396 oprava tl. WN Highprint 4915xe
1402422	1402422 oprava tl. WN Highprint 4915xe
1402609	1402609 oprava čítačky OMNIKEY
1402616	1402616 oprava tl. WN Highprint 4915xe
1402641	1402641 oprava tlač. Epson 890
1402687	1402687 ND OMNIKEY 4
1402701	1402701 oprava Metrologic MS9520
1402718	1402718 ND mouse k PC
1402765	1402765 oprava tlač. HP2055
1402781	1402781 oprava tlač. HP2055
1402824	1402824 oprava Metrologic MS9520
1403040	1403040 ND pre WN Highprint 4915xe
1402192	1402192 Oprava snímača MS 9520
1402536	1402536 Oprava tlač.Epson FX 890
1402559	1402559 Oprava tlač.Epson FX 890
1401778	1401778 Oprava snímača MS 1690
1402808	1402808 Oprava tlač.WN 4915xe
1402690	1402690 Oprava tlač.Epson FX 890
1403002	1403002 Oprava tlač.WN 4915xe
1403008	1403008 Oprava tlač.TALLY 5023+
1403009	1403009 Oprava tlač.WN 4915xe
1403227	1403227 Oprava tlač.Epson FX 890
1403045	1403045 Oprava tlač.TALLY 5023+
1402835	1402835 ND zdroj+ baterka do NTB
1403013	1403013 ND RAM
1403014	1403014 ND RAM
1403212	1403212 ND myš
1403213	1403213 ND RAM
1403289	1403289 ND batéria do UPS ES 700

1403238	1403238 ND HDD
1403452	1403452 ND batéria do UPS ES 700
1403003	1403003 ND monitor
1403010	1403010 ND monitor
1403011	1403011 ND RAM
1403012	1403012 ND batéria do UPS SC 1000
1402987	1402987 ND HDD,DVD
1402989	1402989 ND dátová rozdvojka RJ 45
1403138	1403138 ND batéria do UPS ES 700
1403134	1403134 ND batéria do UPS ES 700
1403207	1403207 ND USB kábel mini
1403210	1403210 ND monitor
1402345	1402345 Oprava tla čiarné Epson FX890
1402383	1402383 Oprava tlačiarne HP LJ1320
1402556	1402556 Oprava notebooku HP Compaq2510p
1402558	1402558 Oprava tlačiarne Epson FX 890
1402694	1402694 Oprava tlačiarne HP LJ1320n
1402698	1402698 Oprava tlačiarne Epson FX 890
1402699	1402699 Oprava tlačiarne WN HPR 4915xe
1402700	1402700 Oprava tlačiarne WN HPR 4915xe
1402729	1402729 Oprava tlačiarne Epson FX 890
1403155	1403155 Oprava tlačiareň HP LJ 1320n
1400728	1400728 ND Prevadzac 1 mies. MC70/MC75
1402695	1402695 ND paper quide assy
1402696	1402696 ND Epson FX890 ribbon drive
1402719	1402719 ND batéria HR1234W
1403176	1403176 ND batéria HR1234W
1403194	1403194 ND C9F26AA HP P201
1403242	1403242 ND controller WN HPR4915xe
1403244	1403244 ND C9F26AA HP P201
1403277	1403277 ND batéria HR1234W
1402381	1402381 Oprava tlač.WN 4915xe
1402368	1402368 Oprava tlač.Epson FX 890
1402388	1402388 Oprava UPS SMART 1500
1402439	1402439 Oprava tlač.WN 4915xe
1402444	1402444 Oprava tlač. Epson FX 890
1401641	1401641 oprava scanera Motorola MC9094
1402743	1402743 oprava tl. WN Highprint 4915xe
1402745	1402745 oprava tlač. Epson 890
1402941	1402941 oprava tlač. Epson 890
1402942	1402942 oprava tlač. Epson 890
1402943	1402943 oprava PC monitor
1402944	1402944 oprava tl. WN Highprint 4915xe
1402996	1402996 oprava PC HP 8000
1403020	1403020 oprava Metrologic MS9520
1403057	1403057 oprava APC Smart UPC 1000
1403058	1403058 ND switch
1403066	1403066 ND bateria pre UPS ES 700
1403068	1403068 oprava tlač. HP1320
1403146	1403146 oprava PC monitor
1403161	1403161 ND bateria pre UPS ES 700
1403198	1403198 oprava OMNIKEY 3121
1403346	1403346 ND pre WN Highprint 4915xe
1403348	1403348 ND pre WN Highprint 4915xe
1403390	1403390 ND klávesnice pre PC
1403564	1403564 ND baterie CR2032 10ks
1404087	1404087 ND battery UPS
1404087	1404087 ND pamät' SD
1402787	1402787 Oprava snímača MS 9520



1403218	1403218 Oprava tlač.HP LJ 4600
1403219	1403219 Oprava tlač.WN 4915xe
1403220	1403220 Oprava tlač.WN 4915xe
1403221	1403221 Oprava tlač.WN 4915xe
1403222	1403222 Oprava tlač.WN 4915xe
1403223	1403223 Oprava tlač. TALLY 5023+
1403317	1403317 Oprava UPS APC 1000
1403513	1403513 Oprava UPS APC 1000 SMART
1403704	1403704 Oprava tlač.Epson FX 890
1403760	1403760 Oprava tlač.WN 4915xe
1403764	1403764 Oprava tlač.WN 4915xe
1403553	1403553 ND čít.čip.kariet OMNIKEY 3121
1403550	1403550 ND batéria do NB 6710b
1403551	1403551 ND adaptér k NB 6710b
1403552	1403552 ND batéria do NB 6730b
1403554	1403554 ND monitor
1403555	1403555 ND myši
1403556	1403556 ND myši
1403604	1403604 ND batéria do APC BE 700
1403745	1403745 ND batéria do APC BE 700
1403749	1403749 ND HDD
1403709	1403709 ND batéria do Motoroly MC 75
1403214	1403214 ND RAM
1403211	1403211 ND myši
1403217	1403217 ND splitter
1403225	1403225 ND ovládací panel
1403226	1403226 ND batéria do UPS ES 700
1403208	1403208 ND HDD
1403237	1403237 ND HDD
1403250	1403250 ND batéria do UPS ES 700
1403288	1403288 ND batéria do UPS ES 700
1403316	1403316 ND batéria do NB 6560b
1403375	1403375 ND adaptér
1403451	1403451 ND batéria do UPS ES 700
1403491	1403491 ND batéria do UPS SMART 1000
1403558	1403558 ND RAM
1403559	1403559 RAM HDD
1403571	1403571 ND snímač ČK
1402608	1402608 oprava Honeywell MK9520
1403163	1403163 oprava NB HP Compaq 6710b
1403199	1403199 oprava tl. WN Highprint 4915xe
1403349	1403349 oprava tlač. HP1320
1403477	1403477 oprava NB HP Elitebook 8440
1403501	1403501 oprava tl. WN Highprint 4915xe
1403506	1403506 oprava tlač. EPSONFX890
1403844	1403844 oprava PC monitor
1403047	1403047 ND pre Epson FX 890
1403389	1403389 ND traktor pre Epson FX890
1403549	1403549 mouse pre PC
1403664	1403664 ND pre WN Highprint 4915xe
1403793	1403793 ND monitor
1403838	1403838 ND bateria pre UPS
1403241	1403241 ND Epson FX890 ribbon drive
1403243	1403243 ND Epson FX 890 panel
1403278	1403278 ND ribbon mask FX890
1403279	1403279 ND Epson FX 890 FRAME,TR,LEFT,
1403281	1403281 ND Epson FX 890 FRAME,TR,RIGHT
1403370	1403370 ND Image Fuser Kit Q3656A
1403496	1403496 ND WN4915xe foil carrier assy

1403498	1403498 ND Honeywell MS9520 VoyagerUSB
1403500	1403500 ND print head 4915xe
1403520	1403520 WD ScorpioBlue 2,5"500GB/5400
1403585	1403585 ND print head 4915xe
1403586	1403586 ND print head 4915xe
1403606	1403606 Set of head cable 4915xe
1403744	1403744 ND batéria HR1234W
1403815	1403815 kit print head nad cable4915xe
1404025	1404025 ND batéria HR1234W
1404026	1404026 ND batéria HR1234W
1404117	1404117 ND print head 4915xe
1404322	1404322 ND print head 4915xe
1404370	1404370 ND batéria HR1234W
1404371	1404371 ND batéria HR1234W
1404437	1404437 ND batéria HR1234W
1402557	1402557 Oprava tlačiarnie HP LJ2430
1403178	1403178 Oprava tlačiarnie WN HPR 4915xe
1403179	1403179 Oprava tlačiarnie WN HPR 4915xe
1403302	1403302 Oprava tlačiarnie Epson FX 890
1403576	1403576 Oprava tlačiarnie Epson FX890
1403816	1403816 Oprava tlačiarnie HP LJ1320
1404093	1404093 Oprava tlačiarnie WN HPR 4915xe
1403578	1403578 Oprava UPS SMART 1000XXL
1403836	1403836 Oprava UPS HPX1300
1404060	1404060 Oprava tlač.WN 4915xe
1404285	1404285 Oprava tlač.WN 4915xe
1401961	1401961 Oprava tlač.Epson FX 890
1404044	1404044 ND myši
1404045	1404045 ND myši
1404046	1404046 ND zdroj
1404247	1404247 ND RAM
1404270	1404270 ND monitor
1404305	1404305 ND batéria do UPS SMART 1000
1404332	1404332 ND snímač ČK
1404435	1404435 ND snímač ČK
1404422	1404422 ND HDD
1404423	1404423 ND klávesnice
1403200	1403200 oprava tl. WN Highprint 4915xe
1403475	1403475 ND pre Epson FX 890
1403663	1403663 ND pre WN Highprint 4915xe
1403761	1403761 oprava tlač. EPSONFX890
1403843	1403843 oprava tl. WN Highprint 4915xe
1403945	1403945 oprava NB HP Compaq 6730b
1403989	1403989 oprava NB HP Compaq 6710b
1404005	1404005 ND baterie pre UPS
1404051	1404051 oprava čítačky OMNIKEY3121
1404055	1404055 ND pre WN Highprint 4915xe
1404163	1404163 oprava monitor HP
1404269	1404269 oprava UPS APC 1000
1404340	1404340 oprava Metrologic MS 951
1403615	1403615 ND pliešky pred tlač.hlavu
1403762	1403762 ND batéria do UPS SMART 1000
1403763	1403763 ND batéria do UPS SMART 750XL
1403766	1403766 ND hlava do tlačiarnie
1403937	1403937 ND datová rozdvojka RJ 45
1403990	1403990 ND monitor
1404006	1404006 ND tractor assy
1404008	1404008 ND batéria do NB 6710b
1404009	1404009 ND napájací zdroj k NB 6710b

1404010	1404010 ND RAM
1403974	1403974 ND batéria na zákl.dosku CR2032
1404413	1404413 Oprava UPS HPX 1300
1404664	1404664 Oprava tlač.Epson FX 890
1402513	1402513 Oprava tlač. PSI 4050XP
1404699	1404699 Oprava tlač. Epson FX 890
1404861	1404861 Oprava tlač. Epson FX 890
1404004	1404004 ND batéria do snímača MC75A
1404334	1404334 ND podávač
1404416	1404416 ND hlava do tlačiarne
1404421	1404421 ND klávesnice
1404476	1404476 ND zdroj
1404415	1404415 ND snímač ČK
1404545	1404545 ND snímač ČK
1404417	1404417 Oprava tlač.WN 4915xe
1404418	1404418 Oprava tlač.WN 4915xe
1404420	1404420 Oprava tlač.Epson FX 890
1404434	1404434 Oprava tlač.WN 4915xe
1404375	1404375 Oprava tlač.Epson FX 890
1404540	1404540 Oprava tlač.Epson FX 890
1404541	1404541 ND batéria do UPS APC 550
1404548	1404548 ND MB,CPU
1404649	1404649 ND monitor
1404721	1404721 ND batéria do APS APC 1000SMART
1404712	1404712 ND zál.zdroj
1404805	1404805 ND batéria do UPS ES 700
1404890	1404890 ND batéria do UPS ES 700
1404839	1404839 ND SU 1000RMI2U
1404487	1404487 ND pre tl. Printronix L7032
1404047	1404047 Oprava tlač. WN 4915xe
1404061	1404061 Oprava tlač. WN 4915xe
1404243	1404243 Oprava tlač. WN 4915xe
1404244	1404244 Oprava tlač. TALLY 5023+
1404245	1404245 Oprava tlač. Epson FX 890
1404283	1404283 Oprava tlač. WN 4915xe
1404301	1404301 Oprava tlač.TALLY 5023+
1404314	1404314 Oprava tlač. Epson
1404414	1404414 Oprava tlač. HP LJ 1320n
1404538	1404538 Oprava tlač. HP LJ 1320n
1404050	1404050 oprava tl. WN Highprint 4915xe
1404459	1404459 oprava PC HP 8000Elite SFF
1404600	1404600 oprava Metrologic MS9520
1404601	1404601 oprava Metrologic MS9520
1404618	1404618 oprava tlač. HP LJ1320
1404717	1404717 oprava tlač. HP LJ P2015dn
1404718	1404718 oprava Motorola MC75A6
1404719	1404719 oprava UPS APC ES700
1404746	1404746 oprava monitor HP
1403177	1403177 Oprava tlačiarne WN HPR 4915xe
1404793	1404793 Oprava tlačiarne WN HP 4915xe
1404795	1404795 Oprava tlačiarne HP LJ 2055dn
1404213	1404213 ND stepping motorPrintronixL7032
1404482	1404482 ND print head 4915xe
1404696	1404696 ND prítlačná lišta WN HPR4915x
1404729	1404729 ND C9F26AA HP P201
1404730	1404730 ND WD5000AAKX HDD 3,5"
1404734	1404734 ND OMNIKEY 3121
1404818	1404818 ND batéria HR1234W
1405138	1405138 ND print head 4915xe

1405139	1405139 ND print head 4915xe
1405179	1405179 ND ED495AA HP90W SmartAC Adapter
1405180	1405180 ND WD5000AAKX HDD 3,5"
1405185	1405185 ND batéria HR1234W
1405208	1405208 ND batéria HR1234W
1405506	1405506 ND C9F26AA HP P201
1404833	1404833 Oprava UPS SMART 700
1404834	1404834 Oprava UPS SMART 1000
1405177	1405177 Oprava tlač.HP LJ P1005
1404745	1404745 Oprava tlač.HP LJ P2015
1405205	1405205 Oprava tlač.WN 4915xe
1405137	1405137 Oprava tlač.HP LJ 2600N
1405335	1405335 Oprava tlač.Epson FX 890
1405360	1405360 Oprava tlač.Epson FX 890
1405550	1405550 Oprava tlač.Epson FX 890
1404242	1404242 Oprava tlač.WN 4915xe
1404806	1404806 Oprava tlač.Espon FX 890
1404840	1404840 Oprava tlač.WN 4915xe
1404961	1404961 Oprava tlač.WN 4915xe
1404981	1404981 Oprava tlač.HP LJ P2015dn
1404983	1404983 Oprava tlač.Epson FX 890
1404985	1404985 Oprava tlač.WN 4915xe
1405029	1405029 Oprava tlač.WN 4915xe
1405183	1405183 ND switch 8port
1405184	1405184 ND video karta
1405155	1405155 batéria do UPS
1404955	1404955 ND RAM + zdroj
1405221	1405221 ND tlač.hlava
1405285	1405285 ND batéria do UPS ES 700
1405269	1405269 ND HDD
1405400	1405400 ND monitor
1405364	1405364 ND Printserver
1405344	1405344 ND RAM + zdroj
1404680	1404680 ND Y rozdvojka
1404801	1404801 ND RAM
1404802	1404802 ND RAM
1404804	1404804 ND RAM
1404807	1404807 ND základná doska
1404808	1404808 ND základná doska
1404652	1404652 ND adaptér
1404956	1404956 ND adaptér
1405122	1405122 ND batéria do UPS
1405132	1405132 ND RAM
1405181	1405181 ND switch 4port
1404049	1404049 oprava tl. WN Highprint 4915xe
1404302	1404302 ND pre Epson FX890
1404395	1404395 oprava tl. WN Highprint 4915xe
1404654	1404654 oprava tl. WN Highprint 4915xe
1404681	1404681 oprava tl. WN Highprint 4915xe
1404716	1404716 oprava tl. Epson FX890
1404929	1404929 oprava čítačky OMNIKEY3121
1404950	1404950 oprava PC HP 4600
1404957	1404957 oprava tlač. HP 1320
1405190	1405190 ND pre LAN Switch
1405260	1405260 oprava čítačky OMNIKEY3121
1405280	1405280 ND pre tl. HP1320
1405467	1405467 ND KVM Switch
1405530	1405530 oprava tl. EPSON DFX8000
1405554	1405554 oprava čítačky OMNIKEY3121

1405597	1405597 ND mouse pre PC
1405651	1405651 oprava laserovej tlačiarne HP
1405677	1405677 ND swirche
1405708	1405708 oprava UPS APC ES 700
1405709	1405709 ND mouse pre PC
1404882	1404882 Oprava tlač.Epson FX 890
1404905	1404905 Oprava notebooku 6730b
1405398	1405398 Oprava tlač. WN 4915xe
1405399	1405399 Oprava tlač.WN 4915xe
1404958	1404958 ND zdroj
1405178	1405178 ND RAM
1405189	1405189 ND batéria do UPS ES 700
1405529	1405529 ND batéria do APC DLA 1500
1405563	1405563 ND batéria do UPS ES 700
1405553	1405553 ND RAM,HDD
1405598	1405598 ND switch 16port
1405646	1405646 ND batéria do UPS ES 700
1405667	1405667 ND monitor
1405717	1405717 ND batéria do UPS ES 700
1405666	1405666 ND RAM,HDD
1405781	1405781 ND batéria do UPS ES 700
1405164	1405164 ND FuserKit do PrintronixL7032
1405165	1405165 ND Fuser Kit do PSi PP4050XP
1404899	1404899 ND Honeywell MS9520 VoyagerUSB
1404900	1404900 ND set of head cable WN4915xe
1404901	1404901 ND batéria HR1234W
1405626	1405626 ND 432321 001 SPS DRV,HD, 72GB
1405657	1405657 ND GP12120 F2 (12V/12Ah) Akum.
1405661	1405661 ND batéria HR1234W
1405713	1405713 ND batéria HR1234W
1405714	1405714 ND GP12120 F2 (12V/12Ah) Akum.
1405792	1405792 ND Epson FX 890 panel
1405794	1405794 ND batéria HR1234W
1405832	1405832 ND C9F26AA HP P201
1405843	1405843 ND batéria HR1234W
1405864	1405864 ND print head 4915xe
1405865	1405865 ND Epson FX890 PAPER GUIDE ASSY.
1405866	1405866 ND Epson FX890 PAPER GUIDE ASSY.
1406086	1406086 ND Epson FX890 PAPER GUIDE ASSY.
1406089	1406089 ND Epson FX890 PAPER GUIDE ASSY.
1406270	1406270 ND batéria HR1234W
1406270	1406270 ND batéria HR1234W
1406326	1406326 ND batéria HR1234W
1406347	1406347 ND batéria HR1234W
1404602	1404602 Oprava tlačiarne FX890
1405724	1405724 Oprava tlačiarne FX890
1405782	1405782 Oprava tlačiarne FX890
1405868	1405868 Oprava tlačiarne WN HPR 4915 x
1405882	1405882 Oprava tlačiarne WN HPR 4915 x
1403201	1403201 oprava skenera Motorola MC9094
1404396	1404396 oprava tl. EPSON FX890
1404557	1404557 oprava tl. EPSON FX890
1404625	1404625 oprava tl. EPSON FX890
1405126	1405126 oprava tl. WN Highprint 4915xe
1405492	1405492 oprava tl. WN Highprint 4915xe
1405501	1405501 oprava tl. EPSON FX890
1405520	1405520 oprava tl. WN Highprint 4915xe
1405521	1405521 oprava tl. WN Highprint 4915xe
1405595	1405595 oprava tlač. HP LJ 2600n

1405642	1405642 oprava tlač. HP LJ 2600n
1405672	1405672 oprava tlač. HP LJ 2600n
1405800	1405800 oprava tlač. HP LJ 2600n
1405926	1405926 oprava tlač. HP LJ 2600n
1406011	1406011 oprava Metrologic MS9520
1406031	1406031 ND batéria pre UPS ES700
1406040	1406040 oprava tl. EPSON FX890
1406057	1406057 oprava PC HP Compaq 8000
1406067	1406067 oprava Metrologic MS9520
1406080	1406080 oprava čítačky OMNIKEY3121
1405524	1405524 ND monitor
1405587	1405587 ND zdroj
1405804	1405804 ND konektory RJ45
1405846	1405846 ND snímač ČK
1405847	1405847 ND čít.čip.kariet
1405877	1405877 ND batéria do UPS
1405935	1405935 ND monitor
1405936	1405936 ND 16port switch
1405960	1405960 ND batéria do UPS
1405945	1405945 ND čít.čip.kariet
1405946	1405946 ND monitor
1405944	1405944 ND RAM
1405998	1405998 ND RAM
1405999	1405999 ND RAM
1406000	1406000 ND RAM+HDD
1406006	1406006 ND batéria do UPS ES 700
1405951	1405951 ND skener Symbol LS2208
1406054	1406054 ND monitor
1405949	1405949 ND USB káble
1406037	1406037 ND batérie
1406082	1406082 ND batéria do UPS
1406083	1406083 ND zdroj
1406091	1406091 ND snímač
1405449	1405449 Oprava UPS HPX1320
1405450	1405450 Oprava UPS HPX2015
1405938	1405938 Oprava tlač.Epson FX 890
1406001	1406001 Oprava tlač.HP LJ1200
1406003	1406003 Oprava tlač.HP LJ1200
1405872	1405872 Oprava tlač.WN 4915xe
1406090	1406090 ND batérie do NB
1406092	1406092 ND adapter k NB
1406093	1406093 ND RAM
1406095	1406095 ND RAM
1406096	1406096 ND RAM
1406097	1406097 ND RAM
1406138	1406138 ND HDD
1406209	1406209 ND batéria do UPS
1406295	1406295 ND DVD mechanika
1406243	1406243 ND optické myši
1406397	1406397 ND monitor
1405648	1405648 Oprava tlač. HP LJ 2600n
1405710	1405710 Oprava tlač.WN 4915xe
1405777	1405777 Oprava tlač.Epson FX 890
1405779	1405779 Oprava tlač.Epson FX 890
1405848	1405848 Oprava PC HP 8000
1405875	1405875 Oprava tlač.Epson FX 890
1405448	1405448 Oprava UPS HPX1320
1406133	1406133 ND pre tlačiareň Epson
1406448	1406448 ND RAM+HDD

1406455	1406455 ND monitor
1406493	1406493 ND batéria do UPS ES 700
1406487	1406487 ND zdroj
1406506	1406506 ND batéria do UPS ES 700
1406517	1406517 ND snímač
1406576	1406576 ND RAM
1406577	1406577 ND RAM
1406578	1406578 ND RAM
1406579	1406579 ND RAM
1406603	1406603 ND optické myši
1406599	1406599 ND DVD
1406600	1406600 ND snímač
1406713	1406713 ND RAM+HDD
1406456	1406456 ND HDD+DVD
1406712	1406712 ND HDD+RAM
1402837	1402837 oprava zál.zdroja 10kVA
1404659	1404659 oprava snímača MS 1690
1404531	1404531 oprava snímača MS 1690
1305636	1305636 Oprava snímača MC 9094
1406206	1406206 Oprava UPS APC 1000
1406292	1406292 Oprava tlač.Epson FX 890
1405880	1405880 Oprava UPS HP X3320
1406369	1406369 Oprava tlač.Epson FX 890
1406238	1406238 Oprava tlač.Epson FX 890
1406445	1406445 Oprava tlač.Epson FX 890
1405723	1405723 Oprava tlač.Epson FX 890
1406237	1406237 ND PAPER EJECT ASSY
1406329	1406329 ND OPC cartridge PP4050XP
1406457	1406457 ND snímač
1406439	1406439 ND batéria do UPS ES 700
1406330	1406330 ND Developer kit PP4050XP
1406366	1406366 ND EpsonFX890ribbon drive pack
1406423	1406423 ND USB A B 1.8m
1406426	1406426 ND USB A B 4.5m
1406519	1406519 ND C9F26AA HP P201
1406532	1406532 ND batéria HR1234W
1406593	1406593 ND C9F26AA HP P201
1406617	1406617 ND C9F26AA HP P201
1406845	1406845 ND battery pack 407419 001
1406087	1406087 Oprava tlačiarne WN HPR 4915xe
1406239	1406239 Oprava tlačiarne WN HPR 4915xe
1406444	1406444 Oprava tlačiarne HP LJ 3700
1406459	1406459 Oprava tlačiarne Epson FX 890
1406145	1406145 oprava tl. WN Highprint 4915xe
1406342	1406342 ND pre tl. EPSON 890FX
1406438	1406438 oprava notebook HP6120
1406446	1406446 oprava tl. WN Highprint 4915xe
1406458	1406458 ND swich
1406476	1406476 oprava tlač. HP LJ 2015n
1406481	1406481 oprava monitora HP
1406490	1406490 oprava čítačky OMNIKEY
1406537	1406537 oprava monitora HP
1406697	1406697 oprava monitora HP 1940
1406340	1406340 oprava tl. WN Highprint 4915xe
1406341	1406341 oprava tl. WN Highprint 4915xe
1406480	1406480 oprava tl. WN Highprint 4915xe
1406860	1406860 oprava PC HP Compaq 7800
1406933	1406933 ND USB kábel
1406935	1406935 ND pre WN HighPrint 4915

1406697	1406697 oprava monitora HP 1706
1407065	1407065 ND bateria pre UPS ES700
1407084	1407084 ND switch
1406033	1406033 ND UPS ES 700
1406584	1406584 ND zdroj do PC
1406595	1406595 ND HDD
1406787	1406787 ND monitor
1406805	1406805 ND zákl.doska dc7900
1406834	1406834 ND switch
1406835	1406835 ND switch
1406869	1406869 ND switch
1406868	1406868 ND skener LS 2208USB
1406862	1406862 ND HDD
1406969	1406969 ND monitor
1406939	1406939 ND RAM
1407028	1407028 ND optické myši
1407049	1407049 ND monitor
1407059	1407059 ND RAM
1407062	1407062 ND monitor
1406274	1406274 Oprava tlač. WN 4915xe
1406275	1406275 Oprava tlač. WN 4915xe
1406433	1406433 Oprava tlač. WN 4915xe
1406507	1406507 Oprava tlač. WN 4915
1406596	1406596 Oprava tlač. Epson FX 890
1406722	1406722 Oprava tlač. HP P2055dn
1406666	1406666 Oprava tlač. WN 4915xe
1406398	1406398 Oprava skenera MC9094
1406992	1406992 ND battery pack 407419 001
1406995	1406995 ND battery pack 407419 001
1406358	1406358 Oprava tlačiarne WN HPR4915xe
1406531	1406531 Oprava tlačiarne Epson FX890
1406767	1406767 Oprava tlačiareň HP LJ 2055d
1406971	1406971 Oprava Tlačiarne HP LJ2015dn
1406974	1406974 Oprava tlačiarne HP LJ1320
1406605	1406605 ND EpsonFX890FRAME,TR,LEFT,EPAG
1406606	1406606 ND EpsonFX890FRAME,TR,RIGHT,EPAG
1406694	1406694 ND Honeywell MS9520+stand
1406768	1406768 ND EpsonFX890 PAPER GUIDE ASSY
1406820	1406820 ND batéria HR1234W
1406826	1406826 ND batéria HR1234W
1407063	1407063 ND batéria HR1234W
1407064	1407064 ND batéria HR1234W
1407155	1407155 ND print head 4915xe
1407178	1407178 ND print head 4915xe
1407210	1407210 ND set of head cable WN4915xe
1407214	1407214 ND WD Scorpio Blue 2,5/500GB/
1407217	1407217 ND Epson FX890 PAPER EJECT ASSY
1407240	1407240 ND Epson FX890 PAPER GUIDE ASSY.
1407258	1407258 ND Epson FX890 PAPER GUIDE ASSY.
1407375	1407375 ND Honeywell Xenon1900 USB+stand
1407414	1407414 ND controller WN HPR4915xe
1407415	1407415 ND power supply WN HPR4915xe
1407560	1407560 ND D Link DGE 528TCopper Gigabit
1406377	1406377 Oprava tlač. PSI 4050XP
1407174	1407174 Oprava tlač. Epson FX 890
1406581	1406581 Oprava tlač. WN4915xe
1406582	1406582 Oprava tlač. WN4915xe
1406583	1406583 Oprava tlač. WN4915xe
1406728	1406728 Oprava tlač. WN4915xe



1406984	1406984 Oprava tlač. Epson FX 890
1406829	1406829 Oprava tlač. Epson FX 890
1407221	1407221 Oprava tlač. Epson FX 890
1407165	1407165 Oprava UPS HP X1320
1407166	1407166 Oprava UPS HP X1320
1406580	1406580 ND ovládací panel
1406922	1406922 ND monitor
1407142	1407142 ND RAM
1407143	1407143 ND grafická karta
1407146	1407146 ND RAM
1407147	1407147 ND dockin station
1407149	1407149 ND batéria do UPS
1407164	1407164 ND monitor
1407167	1407167 ND monitor
1407189	1407189 ND batéria do APC 650
1407192	1407192 ND optické myši
1407219	1407219 ND batéria do HP T1000
1407222	1407222 ND batéria do UPS ES 700
1407223	1407223 ND batéria do UPS ES 700
1407224	1407224 ND monitor
1407260	1407260 ND zákl.doska, zdroj
1407253	1407253 ND monitor
1407265	1407265 ND switch
1407272	1407272 ND HDD
1407309	1407309 ND monitor
1407334	1407334 ND monitor
1407366	1407366 ND batéria do snímača MC75A
1407198	1407198 ND developer pre tl. PSI PP4050XP
1406641	1406641 oprava tlač. HP LJ 2015n
1406861	1406861 oprava PC HP Compaq dc7900
1406938	1406938 oprava monitora HP 1908
1406940	1406940 oprava tl. WN Highprint 4915xe
1407150	1407150 oprava tl. EPSON 890FX
1407203	1407203 ND switch
1407293	1407293 ND pre PC HP Compaq 7800
1407294	1407294 ND pre PC HP Compaq
1407310	1407310 oprava tl. WN Highprint 4915xe
1407313	1407313 oprava PC HP Compaq dc7800
1407407	1407407 Oprava tlač.Epson FX 890
1407376	1407376 Oprava tlač.WN 4915xe
1407377	1407377 Oprava tlač.Epson FX 890
1407379	1407379 Oprava tlač.WN 4915xe
1407319	1407319 Oprava tlač.HP LJ 2055dn
1407359	1407359 Oprava tlač.Epson FX 890
1407383	1407383 Oprava tlač.Epson FX 890
1407580	1407580 Oprava tlač.Epson FX 890
1407380	1407380 ND klávesnice
1407381	1407381 ND myši
1407413	1407413 ND monitor
1407423	1407423 ND monitor
1407483	1407483 ND monitor
1407567	1407567 ND RAM
1407568	1407568 ND RAM
1407569	1407569 ND RAM
1407570	1407570 ND sieťová karta
1407571	1407571 ND snímač
1407012	1407012 ND batéria HR1234W
1407216	1407216 ND KVR16N11S6/2 Kingston 2GB
1407535	1407535 ND set of head cable WN4915xe

1407601	1407601 ND Scanner Honeywell MS9520
1407657	1407657 ND SPUR GEAR 20 Epson FX890
1407855	1407855 ND Li Ion3600mAh,3,7V,MC70/MC75
1407924	1407924 ND Honeywell Xenon 1900 USB
1407429	1407429 ND snímač
1407486	1407486 ND batéria do UPS
1407566	1407566 ND rozbočovač siete
1407572	1407572 ND switch
1407575	1407575 ND RAM
1407576	1407576 ND bezdrôtová myš
1407646	1407646 ND batéria
1407691	1407691 ND HDD
1407690	1407690 ND monitor
1407705	1407705 ND batéria
1407713	1407713 Oprava tlač.Epson FX 890
1407608	1407608 Oprava tlač.Epson FX 890
1407717	1407717 Oprava tlač.WN 4915xe
1407718	1407718 Oprava tlač.WN 4915xe
1408040	1408040 Oprava tlač. HP LJ 3055
1407254	1407254 Oprava UPS BACK ES 550
1407255	1407255 Oprava UPS SMART 1000XL
1407013	1407013 ND pod. pap.+ pliešokk
1407129	1407129 ND zdroj
1407133	1407133 ND batéria do UPS
1407141	1407141 ND zdroj
1407438	1407438 oprava tl. WN Highprint 4915xe
1407612	1407612 oprava sčk Metrologic MS9520
1407620	1407620 oprava tl. WN Highprint 4915xe
1407661	1407661 oprava tl. WN Highprint 4915xe
1407671	1407671 oprava tl. EPSON 890FX
1407683	1407683 oprava monitora HP 1940
1407699	1407699 oprava monitora HP 1706
1407702	1407702 oprava tlač. HP LJ 1320
1407816	1407816 oprava monitora HP 1706
1407565	1407565 ND mouse k PC
1407833	1407833 oprava čítačky OMNIKEY3121
1407835	1407835 ND pre tl. WN Highprint 4915xe
1407839	1407839 oprava sčk Focus
1407845	1407845 ND switch
1407865	1407865 oprava sčk Metrologic
1407882	1407882 ND pre Epson FX 890
1407931	1407931 ND pre Epson FX 890
1407698	1407698 ND switch
1407579	1407579 ND batéria
1407803	1407803 ND napájací adaptér
1407784	1407784 ND čítačka čip.kariet Omnikey
1407910	1407910 ND RAM
1407916	1407916 ND monitor
1407918	1407918 ND optické myši
1407926	1407926 ND optické myši
1407932	1407932 ND optické myši
1408002	1408002 ND RAM
1408003	1408003 ND RAM
1408004	1408004 ND RAM
1408007	1408007 ND RAM
1408008	1408008 ND RAM
1408011	1408011 ND RAM
1408013	1408013 ND RAM
1408015	1408015 ND RAM

1408016	1408016 ND RAM
1408017	1408017 ND RAM
1408019	1408019 ND RAM
1408020	1408020 ND RAM
1408038	1408038 ND HDD
1408039	1408039 ND switch
1408041	1408041 ND narážací nástroj LSA
1408042	1408042 ND tester na siete
1408044	1408044 ND HDD
1407994	1407994 ND batéria do UPS
1407993	1407993 ND batéria do UPS
1407992	1407992 ND batéria do UPS
1407476	1407476 ND monitor
1407463	1407463 ND HDD,RAM,myš
1407942	1407942 ND predný ovládací panel
1408188	1408188 ND batéria do UPS
1408233	1408233 ND snímač ČK
1407693	1407693 ND káble+konektory
1407184	1407184 Oprava tlač.WN 4915xe
1407231	1407231 Oprava tlač.WN 4915xe
1406205	1406205 Oprava tlač. WN 4915xe
1407406	1407406 Oprava tlač.WN 4915xe
1407378	1407378 Oprava tlač.Epson FX 890
1407564	1407564 Oprava scanera HP SJ 4370
1407574	1407574 Oprava NB HP 2540p
1407358	1407358 Oprava tlač.WN 4915xe
1408834	1408834 servis záložného zdroja APC
1408555	1408555 Oprava tlač.EPSON FX 890
1408556	1408556 Oprava tlač.Epson FX 890
1408542	1408542 Oprava tlač. HP LJ P2015dn
1407965	1407965 Oprava tlač.WN 4915xe
1407967	1407967 Oprava tlač.WN 4915xe
1408027	1408027 Oprava tlač.WN 4915xe
1408029	1408029 Oprava tlač.WN 4915xe
1407923	1407923 Oprava tlač.WN 4915xe
1406693	1406693 Oprava skenera Motorola 9094
1407220	1407220 Oprava tlač.WN 4915xe
1407650	1407650 Oprava tlač.Epson FX 890
1407670	1407670 Oprava tlač.WN 4915xe
1407587	1407587 Oprava tlač.WN 4915xe
1407586	1407586 Oprava tlač.WN 4915xe
1407797	1407797 Oprava tlač.WN 4915xe
1408234	1408234 Oprava tlač.WN 4915xe
1408236	1408236 Oprava tlač.WN 4915xe
1408026	1408026 Oprava tlač.WN 4915xe
1408091	1408091 Oprava tlač.WN 4915xe
1408389	1408389 Oprava tlač.WN 4915xe
1408300	1408300 Oprava UPS SART 1000
1408342	1408342 Oprava UPS HPX1320
1408239	1408239 Oprava tlač.WN 4915xe
1406692	1406692 Oprava skenera Motorola 9094
1407357	1407357 ND baterky do PC
1408043	1408043 ND snímač
1408045	1408045 ND hlava do tlačiarne
1407978	1407978 ND zákl.doska
1408129	1408129 ND zdroj
1408215	1408215 ND batéria do UPS
1408238	1408238 ND monitor
1408219	1408219 ND PAPER EJECT ASSY

1408277	1408277 ND monitor
1408527	1408527 ND HDD+RAM
1408493	1408493 ND monitor
1408492	1408492 ND HDD
1408585	1408585 ND monitor
1408584	1408584 ND monitor
1408560	1408560 ND RAM+HDD
1408489	1408489 ND RAM
1408490	1408490 ND RAM
1408491	1408491 ND RAM
1408615	1408615 ND RAM
1408692	1408692 ND RAM
1408693	1408693 ND RAM
1408707	1408707 ND RAM
1408795	1408795 ND RAM
1408796	1408796 ND RAM
1408798	1408798 ND RAM
1408501	1408501 ND switch
1408686	1408686 ND monitor
1407424	1407424 ND RM1 2764 020CN FIXING ASSY.
1407911	1407911 NDEpsonFX890 SPUR GEAR,GUID set
1407938	1407938 ND Epson FX890 PAPER GUIDE ASSY.
1408194	1408194 ND print head 4915xe
1408223	1408223 ND APS eccentric 4915xe
1408228	1408228 ND C9F26AA HP P201
1408306	1408306 ND WN4915xe foil carrier assy
1408765	1408765 ND C9F26AA HP P201
1407292	1407292 oprava tl. WN Highprint 4915xe
1407869	1407869 oprava Epson FX 890
1407920	1407920 oprava tlač. PSI PP4050XP
1408197	1408197 oprava tl. WN Highprint 4915xe
1408199	1408199 oprava Epson FX 890
1408272	1408272 oprava sčk Metrologic
1408272	1408272 oprava sčk Metrologic
1408397	1408397 oprava Epson FX 890
1408399	1408399 oprava Epson FX 890
1408508	1408508 ND USB HUB 4port
1408631	1408631 oprava PC monitor HP1908
1408665	1408665 ND baterie pre UPS APC 1000
1408860	1408860 oprava PC HP 7700
1408627	1408627 Oprava tlač.WN 4915xe
1408681	1408681 Oprava tlač.Epson FX 890
1408683	1408683 Oprava tlač. HPLJ P2015
1408803	1408803 Oprava tlač.Epson FX 890
1409113	1409113 Oprava tlač.Epson FX 890
1409051	1409051 Oprava tlač. WN 4915xe
1408092	1408092 ND čítačka LECTOR EVO
1408093	1408093 ND batéria do UPS
1408541	1408541 ND set of head cable
1408558	1408558 ND zdroj
1408625	1408625 ND hlava do tlačiarne
1408626	1408626 ND rozbočovač siete
1408629	1408629 ND snímač ČK
1409013	1409013 ND batéria do UPS
1409016	1409016 ND monitor
1409181	1409181 ND adaptér
1409052	1409052 ND batéria do UPS
1409247	1409247 ND batéria do NTB
1409177	1409177 ND HDD, RAM

1409265	1409265 ND batéria do UPS
1409309	1409309 ND monitor
1409307	1409307 ND myši
1409415	1409415 ND batéria do UPS
1409471	1409471 ND monitor
1408794	1408794 ND sieťová karta
1408797	1408797 ND RAM
1408799	1408799 ND RAM
1408800	1408800 ND monitor
1408817	1408817 ND snímač ČK
1408909	1408909 ND switch
1408920	1408920 batéria do UPS
1408945	1408945 ND snímač ČK
1408951	1408951 ND snímač ČK
1409018	1409018 ND batéria do UPS
1408999	1408999 ND snímač ČK
1409116	1409116 ND RAM
1409117	1409117 ND RAM
1409119	1409119 ND batéria do NTB
1409120	1409120 ND RAM
1409121	1409121 ND RAM
1409123	1409123 ND RAM
1409125	1409125 ND batéria do UPS
1407837	1407837 oprava Epson FX 890
1407838	1407838 oprava Epson FX 890
1408198	1408198 oprava Epson FX 890
1408213	1408213 ND pre skener MotorolaMC9094
1408874	1408874 oprava HP Compaq nc6820
1409155	1409155 oprava MFZ HP M1522nf
1409236	1409236 ND kable premiumcord USB 2.0
1409332	1409332 ND baterie pre UPS APC 700
1407647	1407647 oprava tl. WN Highprint 4915xe
1408550	1408550 oprava tl. WN Highprint 4915xe
1408829	1408829 oprava tl. WN Highprint 4915xe
1408839	1408839 oprava tlač.HP LJ 3030
1408843	1408843 oprava tl. WN Highprint 4915
1408856	1408856 oprava Epson FX 890
1408976	1408976 oprava PC HP4600
1409143	1409143 ND kable
1409148	1409148 oprava HP Compaq 6730b
1409955	1409955 Servis záložného zdroja APC
1407836	1407836 Oprava tlačiarne HPR4915xe
1407907	1407907 Oprava tlačiarne HP LJ2300d
1407935	1407935 Oprava tlačiarne Epson FX 890
1407936	1407936 Oprava tlačiarne Epson FX 890
1408647	1408647 Oprava tlačiarne Epson FX 890
1408648	1408648 Oprava tlačiarne HP LJ2015dn
1408296	1408296 ND Honeywell MS9520+stand
1408538	1408538 ND set of head cable WN4915xe
1408789	1408789 ND batéria HR1234W
1409242	1409242 ND WN4915xe foil carrier assy
1409359	1409359 ND batéria HR1234W
1409367	1409367 ND power supply WN HPR4915xe
1409293	1409293 ND OPC Drum Printronix L7032
1409305	1409305 ND RAM
1409306	1409306 ND RAM
1409562	1409562 ND batéria do UPS
1409510	1409510 ND snímač ČK
1409616	1409616 ND čítačka čip.kariet

1409650	1409650 ND podávač papiera
1409746	1409746 ND batéria do MC 75A
1409744	1409744 ND čítačka čip.kariet
1409763	1409763 ND snímač ČK
1409764	1409764 ND snímač ČK
1409765	1409765 ND snímač ČK
1409752	1409752 ND batéria do UPS
1409851	1409851 ND mouse
1409867	1409867 ND switch
1409924	1409924 ND myši
1409934	1409934 ND snímač ČK
1409946	1409946 ND podávač papiera
1409943	1409943 ND batéria do UPS
1409942	1409942 ND batéria do UPS
1410000	1410000 ND RAM
1410002	1410002 ND 8port switch
1410060	1410060 ND batéria do UPS
1410131	1410131 ND batéria do UPS
1410242	1410242 ND RAM
1408802	1408802 Oprava NTB
1408882	1408882 Oprava tlač.HP LJ 1300
1408950	1408950 Oprava tlač.WN 4915xe
1409127	1409127 Oprava tlač.WN 4915xe
1409128	1409128 Oprava tlač.WN 4915xe
1409129	1409129 Oprava tlač.WN 4915xe
1409489	1409489 Oprava tlač.Epson FX 890
1409219	1409219 Oprava tlač.HP LJ 2015dn
1408943	1408943 Oprava UPS SMART 1000
1409263	1409263 Oprava UPS SMART 1500
1409937	1409937 Oprava tlač.WN 4915xe
1409938	1409938 Oprava tlač. T 5023+
1409960	1409960 Oprava tlač.WN 4915xe
1409932	1409932 Oprava tlač.WN 4915xe
1408049	1408049 Profylaktika PRINTRONICS P7220
1408051	1408051 Profylaktika PRINTRONICS P7220
1408204	1408204 Oprava snímača Motorola MC9094
1408808	1408808 Oprava tlačiarne HP LJ 1300
1408891	1408891 Oprava tlačiarne HP LJ 3015
1409220	1409220 Oprava tlačiarne WN HPR4915xe
1409970	1409970 Oprava tlačiarne Epson FX890
1407940	1407940 oprava Epson FX 890
1408398	1408398 oprava tl. WN Highprint 4915xe
1409156	1409156 oprava tl. WN Highprint 4915xe
1409157	1409157 oprava tl. WN Highprint 4915xe
1409158	1409158 oprava tl. WN Highprint 4915xe
1409161	1409161 oprava tl. Tally 5023+
1409313	1409313 oprava HP Compaq 6710b
1409672	1409672 ND pre scanner Motorola MC 9094
1409736	1409736 oprava tl. WN Highprint 4915xe
1409775	1409775 ND kabel USB
1409837	1409837 oprava Epson FX 890
1409945	1409945 oprava tl. WN Highprint 4915xe
1410140	1410140 ND mouse pre PC
1410149	1410149 ND monitor pre PC
1410202	1410202 ND monitor pre PC
1410226	1410226 oprava sčk Metrologic MS9520
1409523	1409523 ND Epson FX890 ribbon mask
1409524	1409524 ND Epson FX890PAPER EJECT ASSY
1409579	1409579 ND set of head cable WN4915xe

1409713	1409713 ND batéria HR1234W
1409714	1409714 ND batéria HR1234W
1409819	1409819 ND batéria HR1234W
1410165	1410165 ND set of head cable WN4915xe
1410283	1410283 ND WN4915xe foil carrier assy
1409715	1409715 ND Baterie GP CR2032 pack/5ks
1410409	1410409 ND Manhattan kabel,USB2.0A/A1,8m
1410410	1410410 ND PremiumCord USB 2.0 A A, 1m
1410411	1410411 ND DVDRW Samsung SE 208 USB
1410429	1410429 ND Manhattan kabel,USB2.0A/A1,8m
1410430	1410430 ND PremiumCord USB 2.0 A A, 1m
1409521	1409521 Oprava tlačiarnie Epson FX890
1409954	1409954 Oprava tlačiarnie WN HPR4915xe
1410163	1410163 Oprava snímača MetrologicMS1690
1410061	1410061 ND batéria do mobilného snímač
1410277	1410277 ND batéria do UPS
1410282	1410282 ND switch
1409882	1409882 ND mouse
1410973	1410973 ND mouse
1410583	1410583 ND batéria do UPS
1410639	1410639 ND RAM
1410705	1410705 ND HEAD KIT ASP
1410688	1410688 ND RAM + HDD
1410760	1410760 ND batéria do UPS
1410791	1410791 ND batéria do UPS
1410792	1410792 ND batéria do UPS
1410878	1410878 ND RAM
1410967	1410967 ND HDD
1410979	1410979 ND datová rozdvojka RJ 45
1409931	1409931 Oprava tlač.WN 4915xe
1409939	1409939 Oprava tlač.Epson FX 890
1409940	1409940 Oprava tlač.Epson FX 890
1410055	1410055 Oprava skenera Xenon 1900
1410056	1410056 Oprava tlač.WN 4915xe
1410157	1410157 Oprava tlač.Epson FX 890
1410377	1410377 Oprava tlač.Epson FX 890
1410378	1410378 Oprava tlač.WN 4915xe
1410536	1410536 Oprava tlač. Epson FX 890
1410708	1410708 Oprava tlač. HP LJ P2015dn
1408201	1408201 oprava tlačiarnie ZEBRA
1409689	1409689 ND pre Motorola MC75A
1410347	1410347 oprava PC HP Compaq 7900
1410434	1410434 ND Omnikey 3121
1410435	1410435 ND mose pre PC
1410437	1410437 oprava tl. WN Highprint 4915xe
1410449	1410449 oprava sčk Metrologic MS9520
1410450	1410450 oprava sčk Metrologic MS9520
1410582	1410582 oprava PC HP Compaq 8000
1410647	1410647 oprava Epson FX 890
1410766	1410766 oprava Epson FX 890
1410769	1410769 ND pre HP LaserJet 2015
1410895	1410895 oprava PC HP Compaq 7800
1410937	1410937 ND pre HP LaserJet 1320
1409310	1409310 Oprava snímača Motorola MC9094
1409529	1409529 Oprava snímača Motorola MC9094
1410512	1410512 Oprava snímača Motorola MC9094
1409311	1409311 Oprava snímača Motorola MC9094
1409771	1409771 Oprava tlačiarnie WN HPR4915xe
1410054	1410054 Oprava tlačiarnie WN HPR4915xe

1410090	1410090 Oprava tlačiarne WN HPR4915xe
1410457	1410457 Oprava tlač. Epson FX 890
1410425	1410425 Oprava tlač. Epson FX 890
1410942	1410942 Oprava tlač. WN 4915xe
1410655	1410655 Oprava UPS SMART 1400
1411172	1411172 Oprava UPS ES 700
1411228	1411228 Oprava tlač. Epson FX 890
1411383	1411383 Oprava tlač. HP Color LJ 4525n
1411385	1411385 Oprava tlač. HP LJ 2600n
1411040	1411040 Oprava tlač. HP LJ 1300
1411176	1411176 ND batéria do UPS
1411177	1411177 ND batéria do UPS
1411178	1411178 ND 8 port switch
1411192	1411192 ND hlava do tlačiarne
1411195	1411195 ND hlava do tlačiarne
1411520	1411520 ND hlava do tlačiarne
1411198	1411198 ND ovládací panel
1411306	1411306 ND zdroj
1411325	1411325 ND optická myš
1411351	1411351 ND mouse + keyboard
1411380	1411380 ND zdroj
1411376	1411376 ND adaptér
1409953	1409953 Oprava tlačiarne Epson FX890
1410213	1410213 Oprava tlačiarne Epson FX890
1410214	1410214 Oprava tlačiarne Epson FX890
1410462	1410462 Oprava tlačiarne WN HPR4915xe
1410515	1410515 Oprava tlačiarne WN HPR4915xe
1410569	1410569 Oprava tlačiarne WN HPR4915xe
1410801	1410801 Oprava tlačiarne HP LJ1320n
1411019	1411019 Oprava tlačiarne WN HPR4915xe
1410215	1410215 ND Epson FX890PAPER GUIDE ASSY
1410504	1410504 ND Epson FX 890 FRAME,TR,LEFT,
1410505	1410505 ND Epson FX 890 FRAME,TR,RIGHT
1410977	1410977 ND set of head cable WN4915xe
1411512	1411512 ND batéria HR1234W
1410646	1410646 oprava tlačiarne HP 1320n
1410722	1410722 oprava tl. WN Highprint 4915xe
1411097	1411097 oprava tlačiarne HP 2055
1411190	1411190 oprava sčk Metrologic MS9520
1410499	1410499 oprava skenera Motorola MC75A
1411237	1411237 oprava tl. WN Highprint 4915xe
1411779	1411779 ND mouse pre PC
1411825	1411825 ND pre PC HP xw4300
1411957	1411957 oprava notebook HP Compaq 6710
1411982	1411982 oprava PC HP Compaq 7800
1411531	1411531 ND snímač ČK
1411612	1411612 ND čítačka Omnikey
1411892	1411892 ND HDD
1411896	1411896 ND RAM
1411898	1411898 ND RAM
1411899	1411899 ND RAM
1411900	1411900 ND RAM
1411903	1411903 ND adaptér
1411910	1411910 ND adaptér
1411988	1411988 ND batéria do UPS
1410548	1410548 Oprava tlač. Epson FX 890
1411213	1411213 Oprava tlač. Epson FX 890
1410966	1410966 Oprava UPS SMART 1500
1411436	1411436 Oprava UPS ES 700



1411130	1411130 ND Opticky valec PC cartridge
1411203	1411203 ND batéria HR1234W
1411885	1411885 ND batéria HR1234W
1411887	1411887 ND set of head cable WN4915xe
1411243	1411243 oprava tl. WN Highprint 4915xe
1411620	1411620 oprava tl. WN Highprint 4915xe
1412003	1412003 oprava tl. WN Highprint 4915xe
1412005	1412005 oprava Epson FX 890
1412372	1412372 oprava PC HP Compaq 7800
1412458	1412458 ND pre EPSON FX 890
1411980	1411980 ND snímač ČK
1412010	1412010 ND batéria do UPS
1412025	1412025 ND optická myš
1412169	1412169 ND snímač
1412196	1412196 ND batéria do UPS
1412257	1412257 ND batéria do UPS
1412319	1412319 ND batéria do UPS
1412318	1412318 ND batéria do NTB
1412247	1412247 ND switch
1412249	1412249 ND batéria do UPS
1412443	1412443 ND batéria do UPS
1411189	1411189 ND baterky +dokina
1411406	1411406 ND podávač papiera
1411701	1411701 ND batéria do UPS
1411007	1411007 Oprava tlač. WN 4915xe
1411193	1411193 Oprava tlač. WN 4915xe
1411200	1411200 Oprava tlač. Epson FX 890
1411204	1411204 Oprava tlač. Epson FX 890
1411207	1411207 Oprava tlač. Epson FX 890
1411208	1411208 Oprava tlač. Epson FX 890
1411209	1411209 Oprava tlač. Epson FX 890
1411242	1411242 Oprava UPS master guard A200NEt
1411245	1411245 Oprava UPS master guard A200NEt
1411246	1411246 Oprava UPS HPX1320
1411248	1411248 Oprava UPS HPX1320
1411773	1411773 Oprava tlač.WN 4915xe
1411890	1411890 Oprava tlač.WN 4915xe
1411981	1411981 Oprava tlač.WN 4915xe
1410637	1410637 Oprava tlačiarne Epson FX890
1411448	1411448 Oprava tlačiarne WN HPR4915xe
1411503	1411503 Oprava tlačiarne WN HPR4915xe
1411621	1411621 Oprava tlačiarne Epson FX 890
1412327	1412327 Oprava tlačiarne WN HPR4915xe
1410649	1410649 ND Epson FX890 PAPER GUIDE
1410952	1410952 ND pressure roller for HP LJ1320
1410991	1410991 ND Epson FX890 PAPER GUIDE
1411592	1411592 ND fuser film for HP P2055
1411889	1411889 ND Epson FX890 Housing panel
1412095	1412095 ND Bateria Li Ion, 2200mAh,
1411539	1411539 Oprava tlač. Epson FX 890
1411215	1411215 Oprava tlač. WN 4915xe
1411613	1411613 Oprava tlač. Epson FX 890
1412260	1412260 Oprava tlač. WN 4915xe
1411420	1411420 Oprava tlač. Tally T6215
1412041	1412041 Oprava tlač.WN 4915xe
1411614	1411614 Oprava tlač. WN 4915xe
1411191	1411191 ND pre EPSON FX 890
1411720	1411720 ND pre EPSON FX 890
1412255	1412255 ND pre EPSON FX 890

1412256	1412256 ND pre tl. WN Highprint 4915xe
1412536	1412536 oprava sčk Metrologic MS9520
1412537	1412537 oprava sčk Metrologic MS9520
1500124	1500124 oprava PC HP Compaq 7900
1411801	1411801 Oprava tlač.Epson FX 890
1411960	1411960 Oprava tlač.Epson FX 890
1412130	1412130 Oprava tlač.Epson FX 890
1412248	1412248 Oprava tlač.WN 4915xe
1412559	1412559 Oprava tlač.WN 4915xe
1411419	1411419 Oprava tlač.Pritronix P5215
1500100	1500100 ND hlava do tlačiarne
1411196	1411196 Oprava tlačiarne Epson FX 890
1411229	1411229 Oprava skenera Motorola MC75A
1500340	1500340 ND batéria do UPS
1500293	1500293 ND batéria do UPS
1500289	1500289 ND batéria do UPS
1500290	1500290 ND monitor
1500533	1500533 ND tlačová hlava
1500536	1500536 ND tlačová hlava
1500246	1500246 ND snímač ČK
1410794	1410794 Oprava skenera Motorola
1500094	1500094 Oprava tlač.WN 4915xe
1500097	1500097 Oprava tlač.WN 4915xe
1500098	1500098 Oprava tlač.WN 4915xe
1500099	1500099 Oprava tlač.WN 4915xe
1500260	1500260 Oprava tlač.HPLJ 1320n
1500279	1500279 Oprava UPS HPX1320
1411210	1411210 Oprava skenera Motorola
1500306	1500306 Oprava tlač.Epson FX 890
1410643	1410643 oprava skenera Motorola MC75A
1500043	1500043 oprava tl. WN Highprint 4915xe
1500095	1500095 oprava PC HP 8000
1500262	1500262 ND pre Motorola MC75A
1500300	1500300 ND pre tl. WN Highprint 4915xe
1500316	1500316 ND pre tl. WN Highprint 4915xe
1500322	1500322 oprava sčk Metrologic MS9520
1500347	1500347 oprava sčk Metrologic MS9520
1410978	1410978 Oprava snímača Motorola MC9094
1411482	1411482 Oprava tlačiarne Epson FX FX89
1500186	1500186 Oprava tlačiarne WN HPR 4915xe
1500243	1500243 Oprava tlačiarne WN HPR 4915xe
1500154	1500154 ND Honeywell Xenon 1900 USB+st
1500184	1500184 ND Scanner Honeywell MS9520+st
1500185	1500185 ND Scanner Honeywell MS9520+st
1500437	1500437 ND Honeywell Xenon 1900 USB+st
1500488	1500488 ND WN4915xe foil carrier assy
1411473	1411473 Oprava snímača Motorola MC75A
1412361	1412361 Oprava tlačiarne WN HPR 4915xe
1500044	1500044 oprava tlač. EPSON FX 890
1500092	1500092 ND pre tlač. EPSON FX 890
1500323	1500323 oprava tl. WN Highprint 4915xe
1500564	1500564 ND mouse pre PC
1500335	1500335 Oprava UPS HPX1320
1500349	1500349 ND RAM
1500350	1500350 ND HDD